





PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

## SANITARY WARE SPECIFICATION SHEET

Stern (Israel) "Elite 1000 Plus" Chrome plated Item Descriptions deck mounted extended body sensor mixer with adjustable temperature limiter in 9V DC Supply with IP67 waterproof battery box Dimensions L88 x W44 x H338 mm Elite 1000 Plus B Model Code Number 236750 Finish Chrome Plated Supplier Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012 E-mail acme@acmesanitary.com.hk Website www.acmesanitary.com.hk

### ELITE 1000 PLUS B Ref # 236750

Touch-free electronic faucet for deck-mounted installations. Tall version for counter top washbasins. Activated by infrared sensor. For hot and cold water. Includes a mixer for temperature adjustmet. Filters included. Chrome plated body, other finishes available. Includes a low battery indicator. Latching solenoid valve is located above deck inside the product for added vandal protection. Regular faucet installation with simple battery connection. Adjustable setting by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory settings. A 24 hour mandatory hygiene flush is available upon request.


#### Application:

Deck-mounted faucet. Combining an elegant minimalist design with anti-vandal features. Easy installation. Long lasting even in the harshest installation sites. Helps washrooms stay clean and saves water. Prevents cross contamination. Ideal for stadiums, train and bus stations and highway rest stops.

#### Use:

Touch-free electronic faucet. The faucet is automatically activated when the users place their hands within the sensor range and stops when the users remove their hands.

		PRODUC	CT AT A GLANCE			
Installation		Lavatory mounted				
Power Supply		9V external battery box				
Operating pressure		0.5-8.0 bar / 7.0-116.0 PSI				
Water supply		Hot and cold water				
Water flow		2 lpm / 0.5 gpm				
Water temperature		70°C Maximum				
Security Time		90 seconds. Adjustable by remote control				
ORDERI	NG INFORM	ATION				
MODEL	CODE	POWER	ADDITIONAL SPECIFICATIONS			
ELITE 1000 B 236700		9V battery	With mixer for water temperature adjustment			
ELITE 1000 E 236800		9V transformer				
ELITE 1000 LB 236550		9V battery	Long spout length 138mm \ 5.44"			
ELITE 1000 LE 236650		9V transformer	With mixer for water temperature adjustment			
ELITE 1000 PLUS B 236750		9V battery	Tall body 338mm \ 13.30" for counter top wash bas			
ELITE 1000 PLUS E	236850	9V transformer	With mixer for water temperature adjustment			

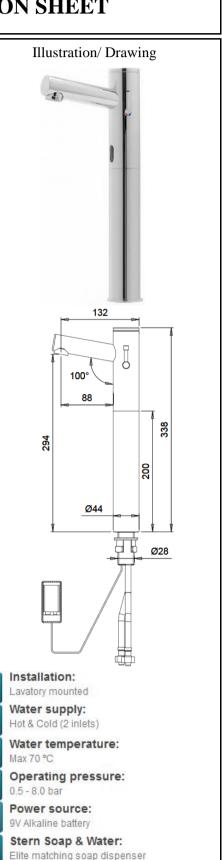


<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.



Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



# **SPARE PARTS LIST**

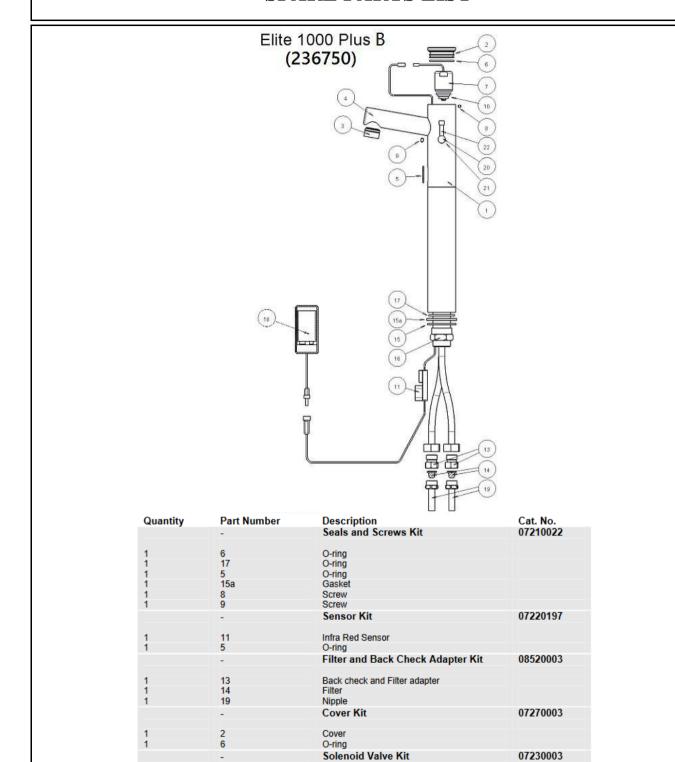

Note: In order to locate the relevant spare part, please check the corresponding parts and part mumber in the drawing. Minimum order quantity will be required.

IP 67 Battery Box

Solenoid valve Diaphragm

Diaphragm

**Battery Box** 

Handle Axis

Mixer Handle kit

04500001

07260002

06530018 06530019

7 10

10

22 20

18

18

<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.

## **Acme Sanitary Ware Co Ltd**



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



# **INSTALLATION**

## STEP 1 - PREPARATION FOR MOUNTING THE FAUCET

1) Shut off the water supply.




Remove the hexagonal nut, the disk and the gasket. Do not remove the O-ring from the base of the faucet.





### STEP 2 - INSTALLING THE FAUCET

Place the faucet with O-ring into the hole in deck or lavatory. Make sure the O-ring is located between the deck or lavatory and the bottom of the faucet.

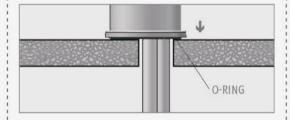

Slide the gasket, disk and hexagonal nut over the flexible hose and secure the faucet into place.

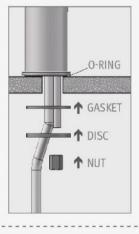

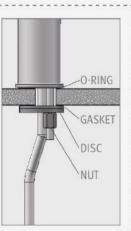





Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



# INSTALLATION

## STEP 3 - CONNECTING THE WATER SUPPLY

Connect the flexible pipe to the water supply.

For models with temperature control connect the red flexible pipe to the hot water supply and the blue flexible pipe to the cold water supply.



MAKE SURE THAT THE FILTER(S) IS/ARE INSTALLED BETWEEN THE FLEXIBLE PIPE AND THE SHUT OFF VALVE (ANGLE VALVE) (NOT SUPPLIED).

Turn on the central water supply and the shut-off valves (angle valves) and check for leaks.





## **Acme Sanitary Ware Co Ltd**



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



# **INSTALLATION**

### STEP 4 - CONNECTING THE POWER SOURCE

### **BATTERY VERSION**

Install the battery box at the wall underneath the sink using the two sided adhesive foam tape. The cable connection must point down. (You can use an optional extension cable in order to assemble the battery box up to 10ft. away from the sink.)



1

#### TRANSFORMER VERSION

Plug the transformer into the electricity socket and connect the connectors.



(2)

In order to avoid entering into the adjusting mode, wait 10 seconds before operating the faucet. If the range is unsatisfactory, refer to the section titled "settings adjustment.



NOTE: This model includes a special aerator that allows you to adjust the water stream direction on site in order to prevent water splashing if needed. To change the angle of the water stream, simply move the adjustable tilting plate by pressing it smoothly.

ATTENTION! the aerator is tightened to prevent removal by hand.





Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



# **TROUBLESHOOTING**

PROBLEM	INDICATOR	CAUSE	SOLUTION
	1. Sensor flashes continuously when user's hands are within the sensor's range.	Low battery.	Replace battery
	2. LED in the	1. Range is too short.	Increase the range
	sensor does not flash once when user's hands are within the	2. Range is too long.	Decrease the range
		3. Battery is completely used up 4. Unit is in "Security Mode"*	The battery must be replaced.
	sensor's range.	5. Sensor is picking up reflections from the washbasin or another object.	Eliminate cause of reflection.
	3. LED in the sensor flashes once when user's hands are within the sensor's range.	1. Connectors between the electronic unit and solenoid are disconnected.	Connect the electronic unit connectors to the solenoid.
		2. Debris or scale in solenoid.	Unscrew solenoid, pull out the plunger and the spring from the solenoid and clean them. Use scale remover material if needed. When replacing the plunger, please make sure that the spring is in vertical position.
		3. The central orifice in the diaphragm is plugged or the diaphragm is torn	Clean the orifice or replace diaphragm.
		4. The water supply pressure is higher than 8 bar.	Reduce the supply water pressure.
		5. The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the back check prevents from dropping, even after water supply pressure drops under 8 bars.	Shut off water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product.
Water flow from spout does not stop:	1. Sensor flashes once when user's hands are within the sensor's range.	Debris or scale in diaphragm	Clean the orifice or replace diaphragm.
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Sensor is dirty or covered.**	Clean or eliminate case of interference.
		2. Sensor is picking up reflections from the washbasin or another object.	Decrease the range or eliminate cause of reflection.
Water flow diminished		Filter or aerator is clogged	Remove, clean, re-install

<sup>\* &</sup>quot;Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. To return to normal operation remove any blockage.

<sup>\*\*</sup> In this case, the water flow will stop anyway after 90 seconds because of the security time.