



Acme Sanitary Ware Co. Ltd.

1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong

Tel: 2388 7171 Fax: 2710 8012


Email: acme@acmesanitary.com.hk


Website: www.acmesanitary.com.hk

American Standard

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SANITARY WARE SPECIFICATION SHEET

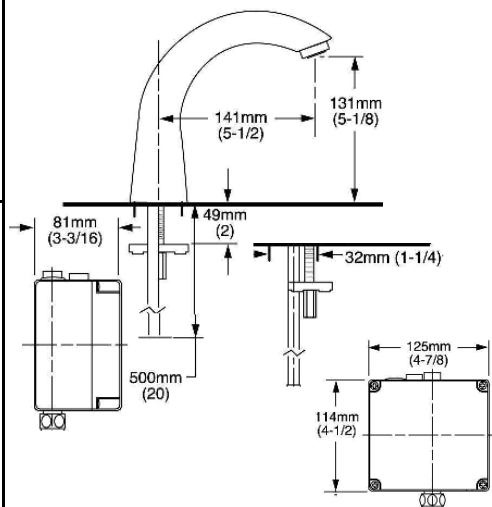Item Descriptions	American Standard (PRC) "Selectronic" Chrome plated casted spout sensor faucet; nominated flow rate 1.7 L/min in WELS Grade 1 ; Registration No. TN 25-0043	Illustration/ Drawing   <table><tr><td>Sensor</td><td>Infrared Sensor</td></tr><tr><td>Valve</td><td>Solenoid Valve</td></tr><tr><td>Battery</td><td>4 x AA</td></tr><tr><td>Operating range</td><td>5mm to 250mm max (Default 120 mm)</td></tr><tr><td>Inlet</td><td>G 1/2"</td></tr><tr><td>Water pressure</td><td>0.05 MPa ~ 0.75 MPa</td></tr><tr><td>Material</td><td>Brass</td></tr><tr><td>Surface</td><td>Chrome Plated</td></tr><tr><td>Origin of Country</td><td>PRC</td></tr></table> Inner Box size (mm) : 310*210*120 Carton size (mm) : 440*330*360 Qty / Box: 6 pcs Product weight : 2.43 Kg	Sensor	Infrared Sensor	Valve	Solenoid Valve	Battery	4 x AA	Operating range	5mm to 250mm max (Default 120 mm)	Inlet	G 1/2"	Water pressure	0.05 MPa ~ 0.75 MPa	Material	Brass	Surface	Chrome Plated	Origin of Country	PRC
Sensor	Infrared Sensor																			
Valve	Solenoid Valve																			
Battery	4 x AA																			
Operating range	5mm to 250mm max (Default 120 mm)																			
Inlet	G 1/2"																			
Water pressure	0.05 MPa ~ 0.75 MPa																			
Material	Brass																			
Surface	Chrome Plated																			
Origin of Country	PRC																			
Dimensions	Refer to drawing																			
Model	FFAS8805-000500BC0 40.2159.000 (Aerator)																			
Finish	Chrome Plated																			
Manufacturer	American Standard (PRC)																			
Source	Acme Sanitary Ware Co. Ltd Mr. Eric Wong / Mr. Wilson Hung																			
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012																			
E-mail	acme@acmesanitary.com.hk																			
Website	www.acmesanitary.com.hk																			

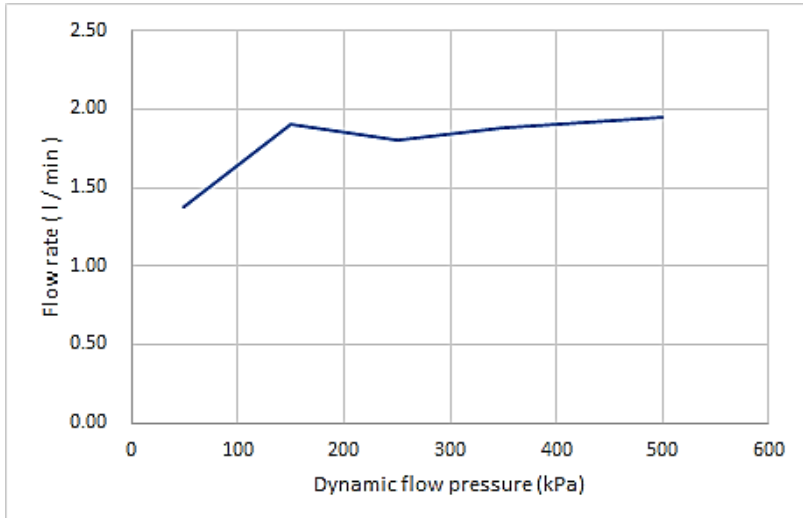

Dynamic flow pressure (kPa)	50	150	250	350	500
Flow rate (l/min)	1.38	1.90	1.80	1.88	1.95

Surface Treatment : Ni>=5.0u, Cr>=0.2u	
Life cycle : 200,000 cycle	

* All information of the above is for the reference only. No prior notice is made if any changes.

註冊號碼 (Registration No.):

TN 25-0043



自願參與用水效益標籤計劃 - 水龍頭
Voluntary Water Efficiency Labelling Scheme - Water Taps



茲證明

This is to certify that

將下列水龍頭在本計劃內註冊：
has registered the following water tap under this scheme :

牌子 / Brand	:	American Standard + Neoperl
型號 / Model	:	FFAS88Y5-000XXXBC0 + 40.2159.000
種類 / Type	:	Non-mixing
原產地 / Country or Region Origin	:	China (Tap) Germany (Flow Controller)

Y – denotes the code of power supply
XXX – denotes the code of colour

在用水效益標籤上展示的標誌

Symbolic Presentation on the Water Efficiency Label :

用水效益類別

Water Efficiency Grade

耗水量

Water Consumption



滴水點

Water droplet(s)

1

with additional merit*

1.7

公升/分鐘

litres/minute

*with additional merit of "Automatic closing mechanism"

簽發日期:

Date of Issue:

7 July 2025



水務署

Water Supplies Department



水務署署長(龔庭璋代行)
for Director of Water Supplies



水務署
Water Supplies Department

香港灣仔告士打道七號入境事務大樓
Immigration Tower, 7 Gloucester Road, Hong Kong.



sdinfo@wsd.gov.hk

圖文傳真
Facsimile

2824 0578

) in WSD 3321/2024 T/J(1296/2024)

23 January 2025



Approval of "AMERICAN STANDARD" Sensor Tap (General Acceptance No. C20250067)

Your E-Application [file-id: ETJ-GA-20241013-393] dated 31 October 2024 and subsequent submission received by this department on 2 January 2025 refer.

Having considered the test reports ref. 221005PC240055A and 240390EN242495 issued on 2 January 2025 and 11 September 2024 by Fugro Technical Services Ltd., this Authority accepts that the fitting described below complies with, and its use when correctly installed does not contravene, the Waterworks Ordinance and Regulations.

Name of Manufacturer: Jiangmen LIXIL AS Sanitary Fitting Manufacturing Co Ltd

Country of Origin: the Mainland of China

Brand: American Standard

Details of Fitting: 1/2" Deck mounted sensor tap with 1 no. of flexible hose

Model: FFAS88Y5-000XXXBC0
(where "Y" denotes code of power supply, "XXX" denotes the code of colour)



Body Markings: *American
Standard*

Expiry Date: 31 December 2026

This Authority hereby permits the use of the above fitting in fresh water plumbing systems subject to full adherence to Waterworks installation requirements. In particular, you are required to draw your customers' attention to the following requirement-

"A stop cock or gate valve must be installed at the upstream of the fitting for manual isolation of water supply." AND

"The main voltage operated sensor valve should comply with the electricity safety regulation for applications in bathroom, toilet etc."

A condition of this acceptance is that the fitting to be installed shall be replicas of the sample as certified by the testing agent mentioned above and without modifications. This acceptance may be withdrawn at any time if the standard of the fitting installed fails to meet that of the approved sample or if the fitting is found to be unsuitable for use in fresh water plumbing systems.

This acceptance is only applicable to the main body of the fitting, unless otherwise specified.

For the use of the fitting in any project, the General Acceptance Number of this letter must be quoted as a means of identification of acceptance of the fitting by this Authority.

Should you have any enquiries, please contact our Engineer Mr Albert CHOW at tel. no. 3583 4086.

Yours faithfully,




(Terry KUNG)
for Director of Water Supplies

Encl.

c.c. WSD 3321/1/82] - without catalogue
ME/MC] - with soft copy only

Selectronic Sensor Faucet

American Standard

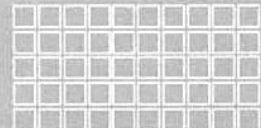

Installation & Operation Instructions

Recommended Tools and Materials



Adjustable Wrench



Level



Screwdriver



Tape Measure



Teflon Tape



Pencil




Electric drill



Sink

Pre-Installation Checks

1. Remove all the impurities in pipes before beginning to avoid clogging.
2. Water supply for this product should be drinking water. Seawater is forbidden.
3. Check installation distances with the dimension diagram to ensure correct installation.
4. To avoid surface damage by improper cleaning, please refer the attached care and Maintenance instruction.
5. Before using the mixed water spout, please make sure the temperature adjustment handle is set with the biggest status of cold water and then turn the handle slowly to avoid scald.
6. When installing the battery, please pay attention to the right side of anode and cathode and make sure the battery box is waterproof avoid the damp on its effect.
7. Don't make the sensor window close to electromagnetic or the strong ultraviolet radiation.
8. Please turn off the water supply system during maintenance.
9. Keep the sensor window clean. And don't Knock on it.
10. Organic solvent shouldn't spray to the sensor window directly.

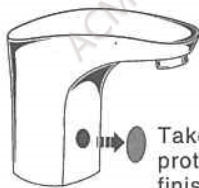


Take off the sensor protection label after finish installation

Specification

Type	power supply	WF-8800.000.50 (DC) – Lithium Battery 6V	WF-8805.000.50 (DC) – Lithium Battery 6V	WF-8806.000.50
		A-8800-000-50(WF-8800.000.50) (DC) – Lithium Battery 6V	A-8805-000-50(WF-8805.000.50) (DC) – Lithium Battery 6V	A-8806-AF(WF-8806.000.50)(DC) – Lithium Battery 6V
		WF-8810.000.50 (AC) – 165V – 275V	WF-8805.0D1.50 (DC) –Lithium Battery 6V	WF-8816.000.50 (AC) – 165V – 275V
		WF-8810.010.50 (AC) – 165V – 275V	WF-8805.0P2.5E (DC)–Lithium Battery 6V	WF-8816.010.50 (AC) –165V – 275V
		WF-8810.0W0.50 (AC) –110V	WF-8815.000.50 (AC) – 165V – 275V	WF-8816.0W0.50 (AC) –110V
		WF-8810.0P2.5E (AC)–165V – 275V	WF-8815.010.50 (AC) –165V – 275V	WF-8826.000.50 (Multi-AC) –165V – 275V
		WF-8810.0P5.5E (AC) – 165V – 275V	WF-8815.0W0.50 (AC) – 110V	
		WF-8820.000.50 (Multi-AC) –165V – 275V	A-8815-000-50 (WF-8815.0T0.50) (AC) –165V – 275V	
		WF-8815.0P2.5E (0.5GPM)–(AC)–165V – 275V		
		WF-8825.000.50 (Multi-AC) – 165V – 275V		
Mode of the inducing	Infrared induction			
Detects Range (Kodak Gray Card)	10cm~15cm Preset 12cm			
Pressure Requirement	0.05 ~ 0.75MPa			
Supply Pipe Size	G 1/2"			
Environment Temperature	1℃ ~ 55℃			
Acceptable Water Temperature	1℃ ~ 45℃			
Water Saving Setting	The faucet will shut off after the valve is opened more flow 59 seconds.			

Parts List

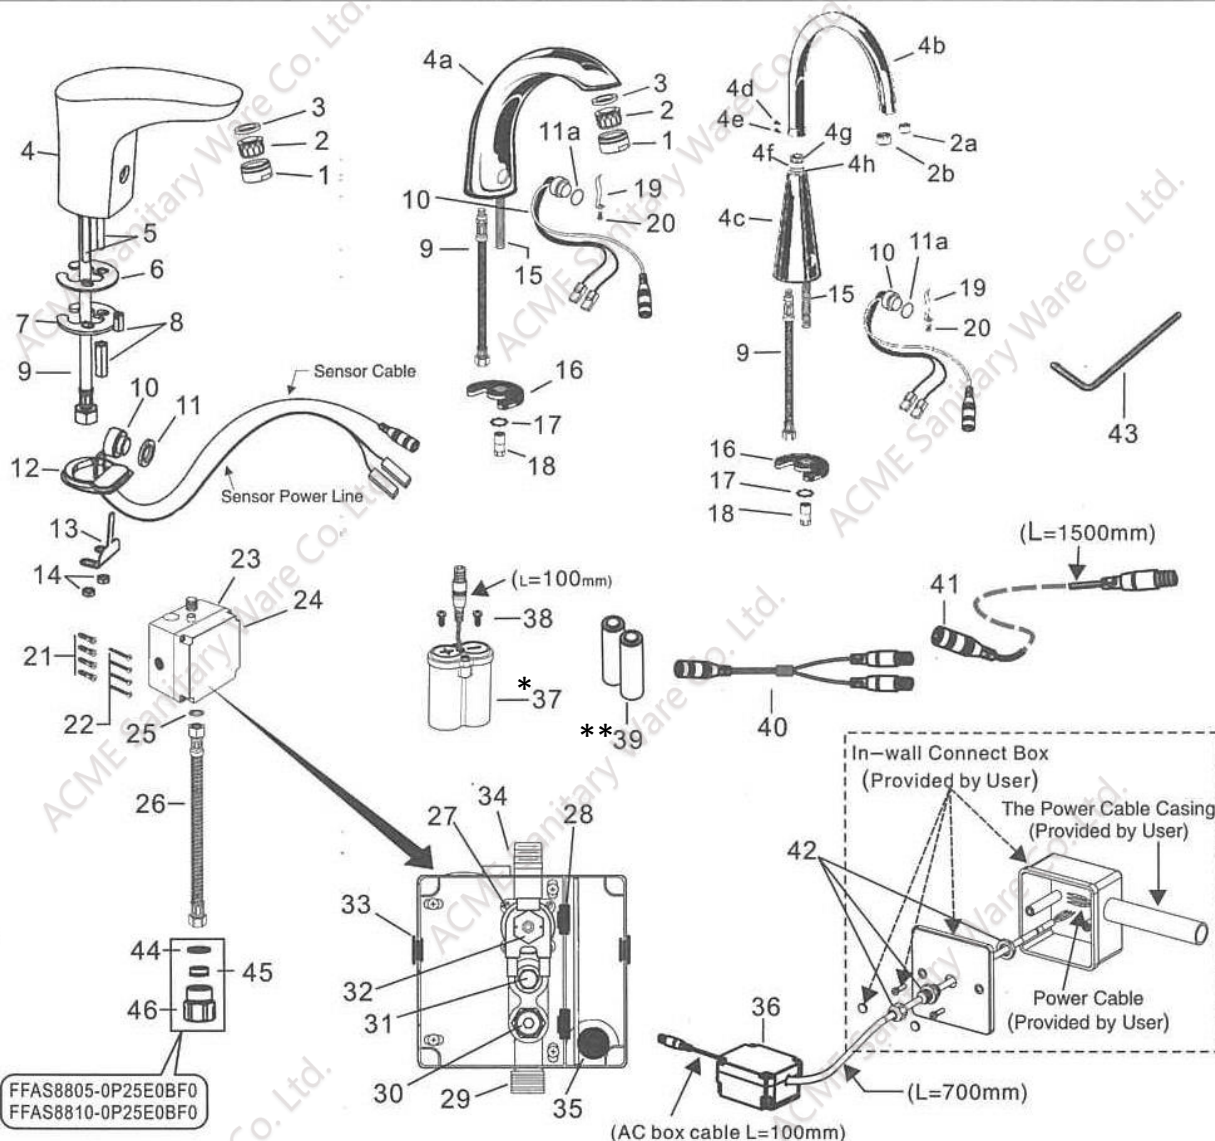

No.	Part Name	Q'ty										No.	Part Name	Q'ty									
		8800	8810	8820	8805	8815	8825	8806	8816	8826			8800	8810	8820	8805	8815	8825	8806	8816	8826		
1	Aerator housing	1	1	1	1	1	1	0	0	0	19	Fixed mount	0	0	0	1	1	1	1	1	1		
2	Aerator	1	1	1	1	1	1	0	0	0	20	Screw	0	0	0	1	1	1	1	1	1		
2a	Aerator	0	0	0	0	0	0	1	1	1	21	Anchor	1	1	1	1	1	1	1	1	1		
2b	Aerator	0	0	0	0	0	0	1	1	1	22	Screw	1	1	1	1	1	1	1	1	1		
3	Washer	1	1	1	1	1	1	0	0	0	23	Valve box	1	1	1	1	1	1	1	1	1		
4	Spout	1	1	1	0	0	0	0	0	0	24	Cover	1	1	1	1	1	1	1	1	1		
4a	Spout	0	0	0	1	1	1	0	0	0	25	Washer	1	1	1	1	1	1	1	1	1		
4b	Spout	0	0	0	0	0	0	1	1	1	26	Hose	1	1	1	1	1	1	1	1	1		
4c	Faucet body	0	0	0	0	0	0	1	1	1	27	Screw	1	1	1	1	1	1	1	1	1		
4d	Screw	0	0	0	0	0	0	1	1	1	28	Gaskets	1	1	1	1	1	1	1	1	1		
4e	Screw	0	0	0	0	0	0	1	1	1	29	Connector	1	1	1	1	1	1	1	1	1		
4f	Clip	0	0	0	0	0	0	1	1	1	30	Flow valve	1	1	1	1	1	1	1	1	1		
4g	O-Ring	0	0	0	0	0	0	1	1	1	31	Filter	1	1	1	1	1	1	1	1	1		
4h	Washer	0	0	0	0	0	0	1	1	1	32	Solenoid valve	1	1	1	1	1	1	1	1	1		
5	Bolt	2	2	2	0	0	0	0	0	0	33	Gaskets	1	1	1	1	1	1	1	1	1		
6	Washer	1	1	1	0	0	0	0	0	0	34	Control valve body	1	1	1	1	1	1	1	1	1		
7	Washer	1	1	1	0	0	0	0	0	0	35	Gaskets	1	1	1	1	1	1	1	1	1		
8	Nut	2	2	2	0	0	0	0	0	0	36	Converter boxes(AC)	0	1	0	0	1	0	0	1	0		
9	Hose	1	1	1	1	1	1	1	1	1	37	Battery box	1	0	0	1	0	0	1	0	0		
10	Sensor	1	1	1	1	1	1	1	1	1	38	Screw	2	0	0	2	0	0	2	0	0		
11	Washer	1	1	1	0	0	0	0	0	0	39	Battery	2	0	0	2	0	0	2	0	0		
11a	O-Ring	0	0	0	1	1	1	1	1	1	40	Multi-connector	0	0	1	0	0	1	0	0	1		
12	Washer	1	1	1	0	0	0	0	0	0	41	Cable	0	0	1	0	0	1	0	0	1		
13	Holder	1	1	1	0	0	0	0	0	0	42	Nut	0	1	0	0	1	0	0	1	0		
14	Nut	2	2	2	0	0	0	0	0	0	43	In-hex wrench	1	1	1	1	1	1	1	1	1		
15	Shank	0	0	0	1	1	1	1	1	1	44	Washer	0	1	0	1	0	0	0	0	0		
16	Washer	0	0	0	1	1	1	1	1	1	45	Regulator	0	1	0	1	0	0	0	0	0		
17	Washer	0	0	0	1	1	1	1	1	1	46	Connector	0	1	0	1	0	0	0	0	0		
18	Nut	0	0	0	1	1	1	1	1	1													


*37 Battery for 4xAA (New Version)

**39 4xAA Battery (New Version)


Installation

1 Faucet Installation


- * Consult the dimension drawing and lay the pipes.
- * Wash and clean the water supply pipeline.

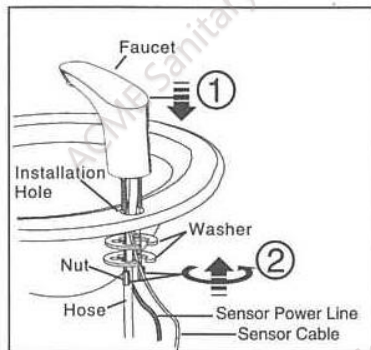


2 Control Valve Installation

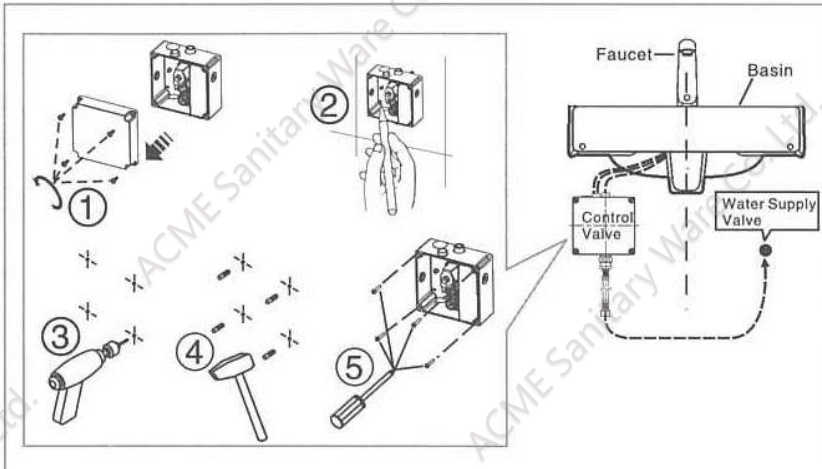


3 Hose Connection

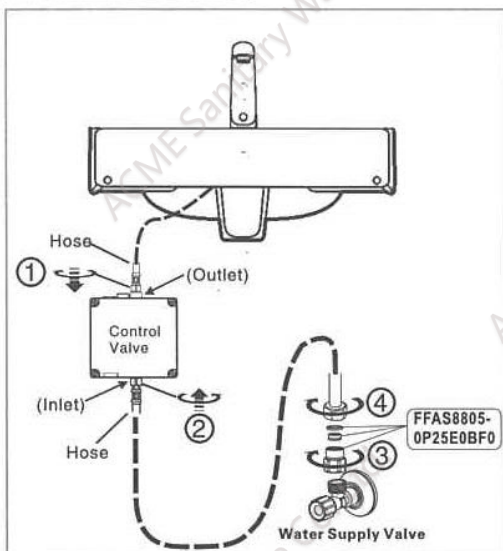

4 Sensor Cable Connection

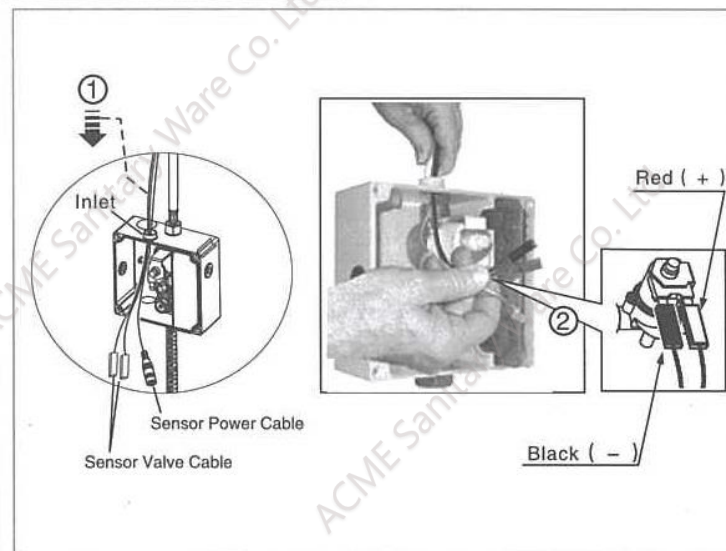

5 Battery Installation (DC) (8800 / 8805 / 8806)

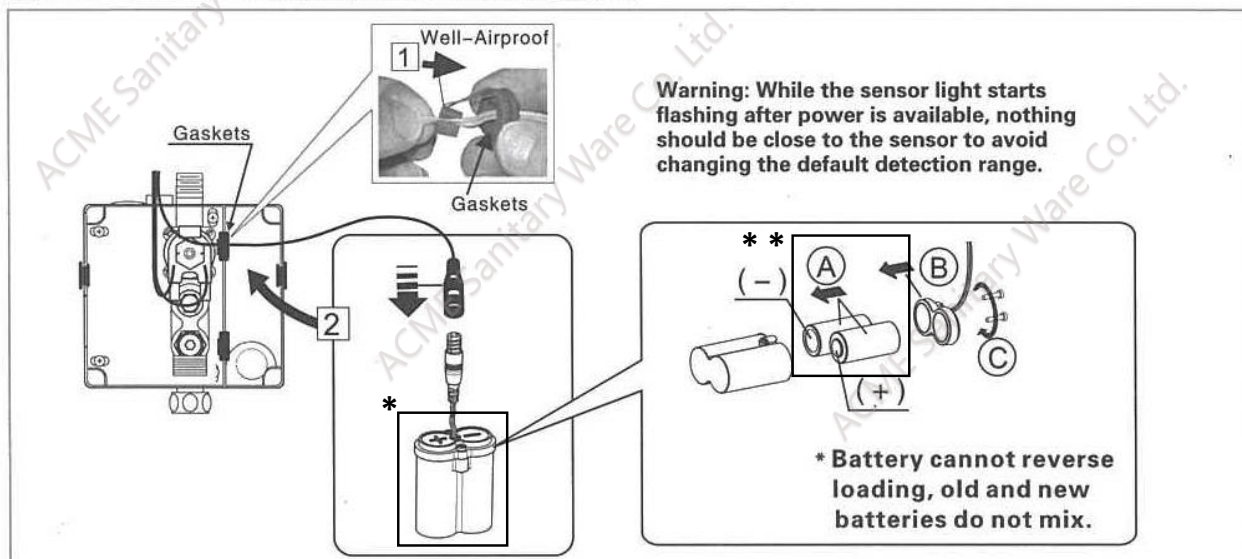

* Battery for 4xAA (New Version)

** 4xAA Battery (New Version)


Installation

6 Connected Components (AC) (8810 / 8815 / 8816)

Notes:

1. Turn off the electrical source and shut down water supply before installation.
2. Installation must by a qualified worker.
3. Not allowed connect AC electrical source to the sensor , otherwise will damage the sensor, even may get an electric shock.
4. The AC wire should supply by the user. The AC wire must $\geq 1\text{mm}^2$, the length of the Wire fix the actual situation by the user. The AC parts(include AC wire, wire pipe,86 type box, 86 type cover) supply by the user.
5. The wire and the parts of the connection must deal with waterproof and leak-proof
6. Must set up earth leakage protective device before the AC adapter, avoid electric shock.

Warning: While the sensor light starts flashing after power is available, nothing should be close to the sensor to avoid changing the default detection range.

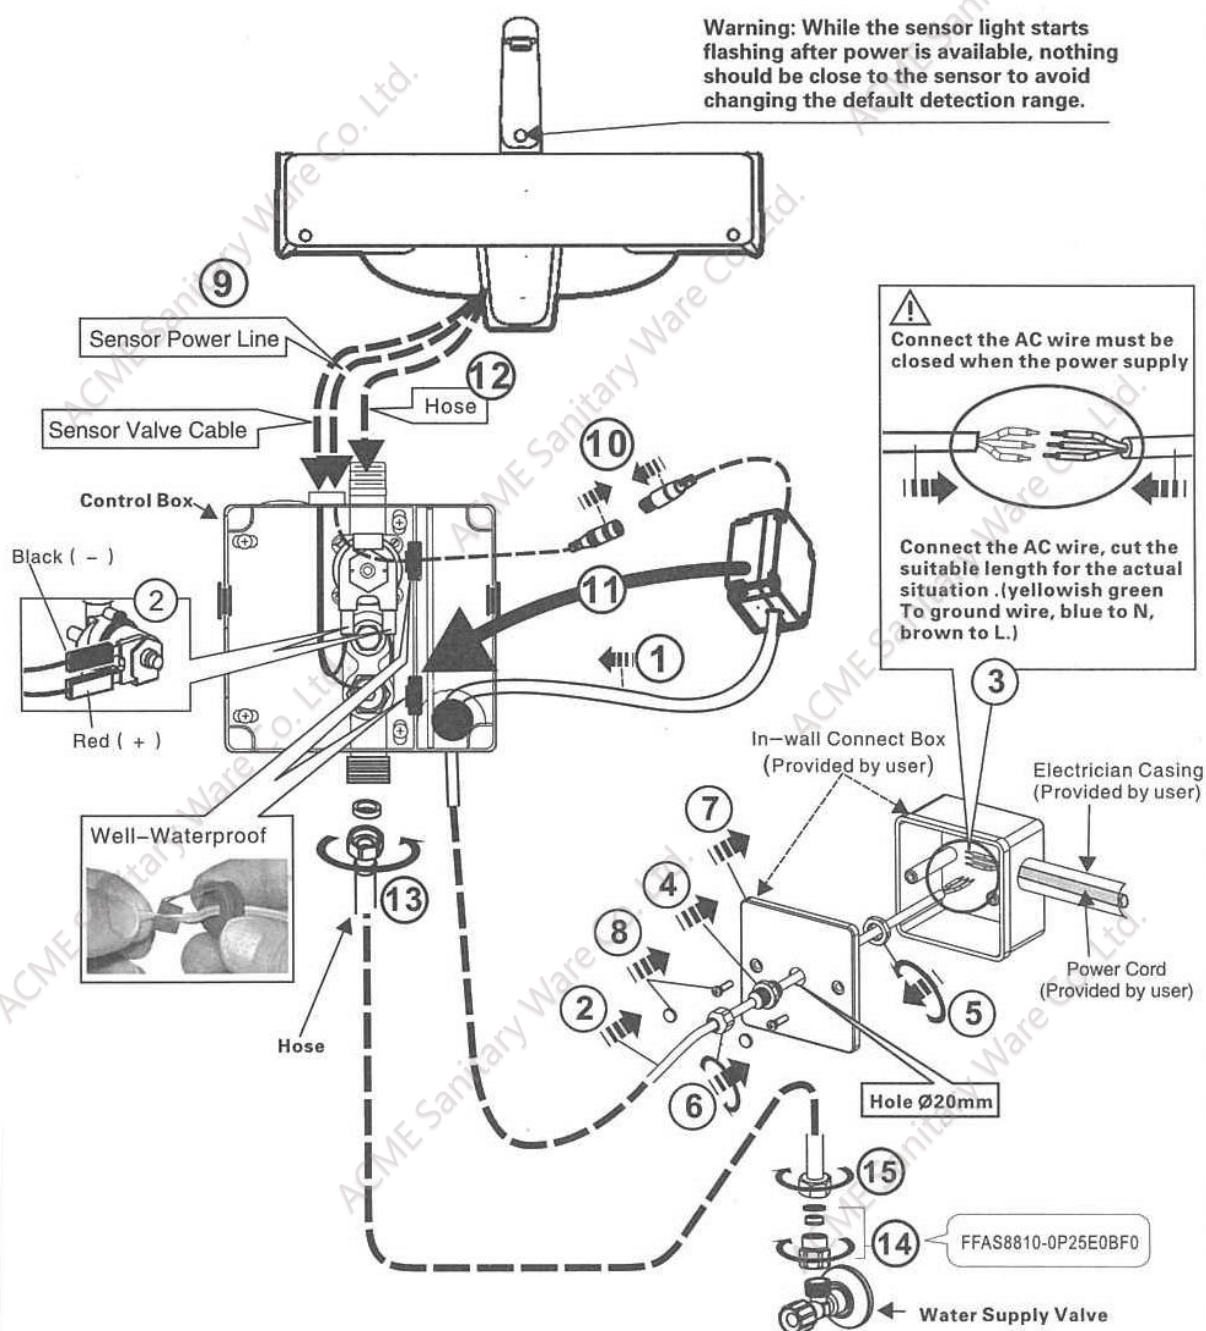

Usage Instruction

1 Test

- * Make sure the connection of power and water supply.
- * Open the water supply, Make sure no leakage in all connection.
- * When enter the sensor zone, sensor detect and flush, When leave the detection zone, valve will stop, and waiting for start.
- * Make sure no thing in sensor zone.

2 Usage



Waiting



Put hand in front of the sensor window, Sensor detects and water come out automatically



Waiting

Usage Instructions

Instantaneous Water Supply Control

- * When put hand or object in the detection range, water will come out; when hand or object out of the detection range it will stop automatically.

Overtime Usage Control

- * The sensor will stop working temporarily if the usage continuous 1 minute.
- * After it stop, hand or object must leave the detection range, when hand or object put into the detection range again, the sensor will work again, otherwise, it can't work.

Replace Battery (DC)

- * If you found the indicator light twinkling continuously in 2 second interval, it means the battery is out of power, and the sensor stop work, you should change a new one.


Water Temperature adjust (Non-thermostatic Valve)

- * If you need the cold and hot water mix, suggest to use thermostatic valve control the temperature to avoid scald.

How to convert rigid goose neck spout to swing spout

The SPOUT is shipped from the factory as a rigid assembly.
To convert the SPOUT into a swing spout proceed as follows:

1. The SPOUT can't swivel (default setting) :
Install with long screws to fix a SPOUT, the SPOUT is not swivel;
2. The SPOUT can swivel:
Install with short screw to fix a SPOUT, the SPOUT as a swivel.

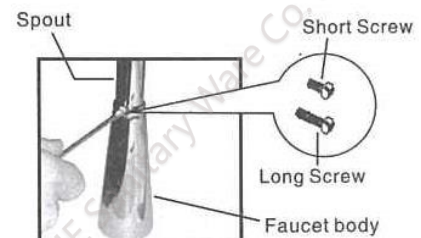


Maintenance & Repair

The Stop Valve of this sensor faucet has equipped with good quality filter, But the impure water or impuring in the water pipe will affect the water flow, in this condition, you should clean the filter, the process is as below:

- 1). Tighten the Stop Valve with Hexagonal Wrench in counter clockwise to shut down water supply.
- 2). Use the special filter key or other opening tools to screw out the Stop Valve Cap.
- 3). Remove the Filter, clean it, and put again.
- 4). Fix the Stop Valve Cap again, and loose the Stop Valve with Hexagonal Wrench. Then it resumes to work.


If necessary, you could clean the aerator too as per below step

- 1). Screw off the Aerator from the Spout.
- 2). Clean the Aerator with water.
- 3). Reinstall the Aerator to the Spout.

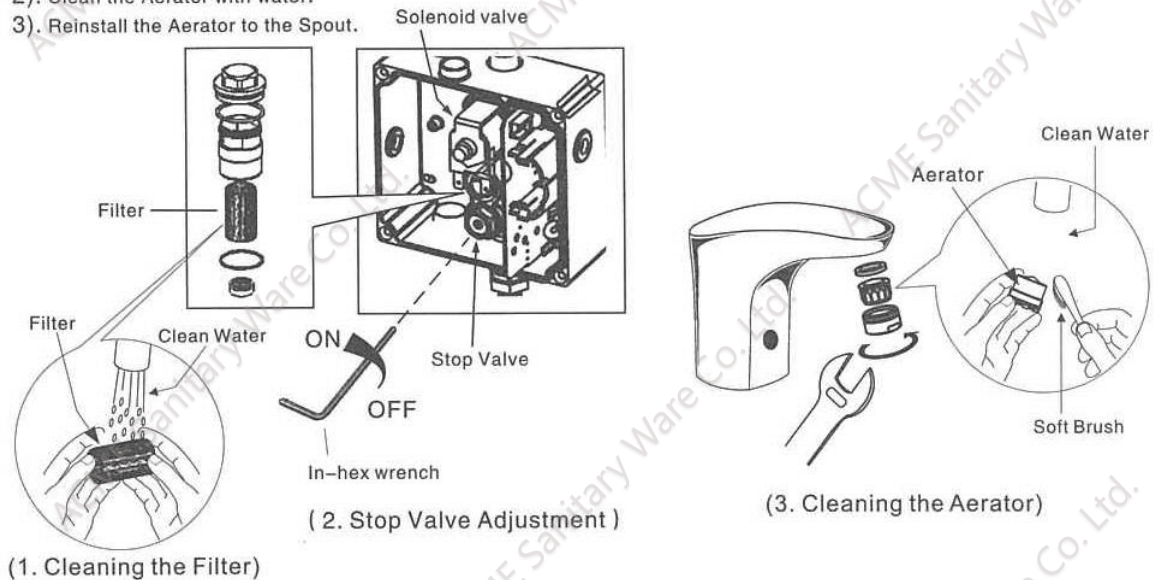


Detection Zone Adjustment


1. Open the valve box, unplug power wire from battery box, wait for a moment then plug it again.

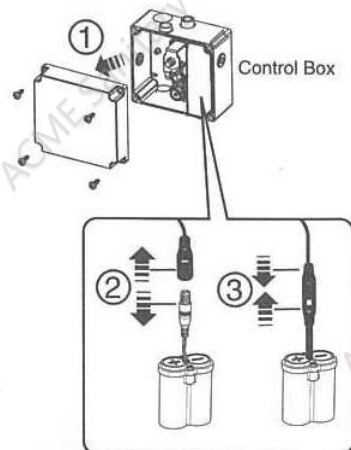

2. Put hand in the distance of 30~50mm in front of the sensor window when the light is blinking.

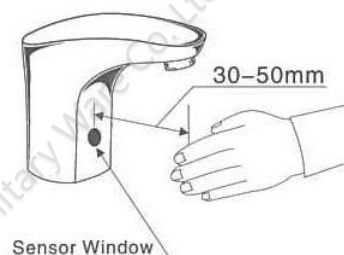

3. Put hand in the distance that you want. when the light turn off, move hand away, the range had been set successfully.

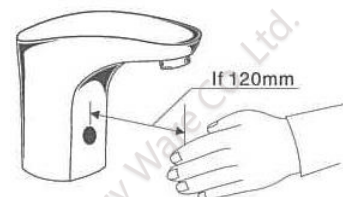

Trouble Shooting Guide

Problem	Reason	Correction
No Detection No Flow	No battery or the battery installed wrongly or no power supply Something around the sensor is detected all the time Sensor window is dirty The connection is not connected correctly	Install battery and connection power supply Remove the things around the sensor Clean the sensor window Check the connection Replace the bottery if the old one is used out
Has detection but no flow	The stop valve is closed Somethings around the sensor is detected all the time Sensor window is dirty	Open the stop valve Remove somethings around the sensor Clean the window
Low water flow	The stop valve is not opened entirely The filters are blocked Low water pressure	Open the stop valve entirely Clean the filters Contact with water supply department
Water flow nonstop	Something around the sensor is detected all the time The Solenoid Valve are blocked	Remove the things around the sensor Clean the Solenoid Valve