
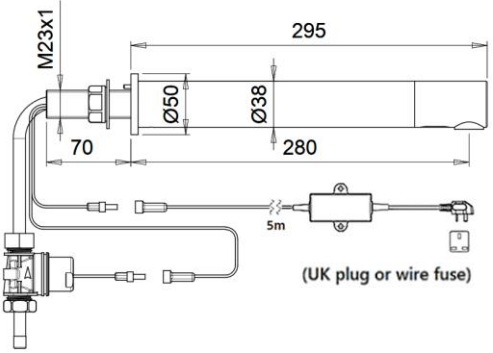





PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SANITARY WARE SPECIFICATION SHEET

<p>Item Descriptions</p> <p>Stern (Israel) "Tubular XL" Chrome plated wall-mounted extra long spout sensor faucet in AC Supply with 5m wire AC 110-240 Vac 50/60Hz to 9V 0.3A IP68 waterproof switching transformers</p>	<p>Dimensions</p> <p>295 mm Long</p>	<p style="text-align: center;">Illustration/ Drawing</p> 																
<p>Model</p> <p>Tubular XLE</p>	<p>Code Number</p> <p>350215</p>																	
<p>Finish</p> <p>Chrome Plated</p>	<p>Supplier</p> <p>Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen</p>																	
<p>Contact Tel/Fax</p> <p>(852) 2388-7171 / (852) 2710-8012</p>	<p>E-mail</p> <p>acme@acmesanitary.com.hk</p>																	
<p>Website</p> <p>www.acmesanitary.com.hk</p>	<p>TUBULAR XLE Ref # 350415</p> <p>Touch-free wall-mounted electronic faucet. Activated by an infrared sensor. Extra long spout version. For cold or premixed water. Chrome plated body, other finishes available. Adjustable setting by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory settings.</p>																	
<p>Application:</p> <p>Wall-mounted faucet. Combines a minimalistic design with vandal resistant features. Helps washrooms stay clean and saves water. Easy installation. Long lasting even in the harshest installation sites. Ideal for shopping malls, sport facilities and entertainment centers.</p>	<p>Use:</p> <p>The faucet will automatically activate when users place their hands in the sensor range and will stop once the users remove their hands.</p>																	
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="background-color: #f2f2f2;">Power supply for battery versions:</td> <td>6x1.5V AA battery (Tubular B) 1x9V battery (Tubular 2030B, Tubular DPB)</td> </tr> <tr> <td style="background-color: #f2f2f2;">Power supply for electricity versions:</td> <td>9V transformer (Tubular E, DPE, 2030 E models)</td> </tr> <tr> <td style="background-color: #f2f2f2;">Recommended water pressure:</td> <td>0.5-8.0 bar (7-116 PSI) With water pressure of more than 8 bars, use a pressure reducing valve for reduction</td> </tr> <tr> <td style="background-color: #f2f2f2;">Sensor range:</td> <td>Self-adjusting sensor Adjustable with optional remote control</td> </tr> <tr> <td style="background-color: #f2f2f2;">Minimum sensor range:</td> <td>35mm / 1.38"</td> </tr> <tr> <td style="background-color: #f2f2f2;">Maximum sensor range:</td> <td>300mm / 11.81"</td> </tr> <tr> <td style="background-color: #f2f2f2;">Security time:</td> <td>90 seconds. Can be reduced with optional remote control</td> </tr> <tr> <td style="background-color: #f2f2f2;">Hot water temperature:</td> <td>Max. 70°C</td> </tr> </table>		Power supply for battery versions:	6x1.5V AA battery (Tubular B) 1x9V battery (Tubular 2030B, Tubular DPB)	Power supply for electricity versions:	9V transformer (Tubular E, DPE, 2030 E models)	Recommended water pressure:	0.5-8.0 bar (7-116 PSI) With water pressure of more than 8 bars, use a pressure reducing valve for reduction	Sensor range:	Self-adjusting sensor Adjustable with optional remote control	Minimum sensor range:	35mm / 1.38"	Maximum sensor range:	300mm / 11.81"	Security time:	90 seconds. Can be reduced with optional remote control	Hot water temperature:	Max. 70°C	<p>Installation:</p> <p>Wall mounted duct concealed</p> <p>Water supply:</p> <p>Cold or premixed water (1 inlet)</p> <p>Water temperature:</p> <p>Max 70 °C</p> <p>Operating pressure:</p> <p>0.5 - 8.0 bar</p> <p>Power source:</p> <p>9V Transformer</p> <p>Stern Soap & Water:</p> <p>Tubular matching soap dispenser</p> 
Power supply for battery versions:	6x1.5V AA battery (Tubular B) 1x9V battery (Tubular 2030B, Tubular DPB)																	
Power supply for electricity versions:	9V transformer (Tubular E, DPE, 2030 E models)																	
Recommended water pressure:	0.5-8.0 bar (7-116 PSI) With water pressure of more than 8 bars, use a pressure reducing valve for reduction																	
Sensor range:	Self-adjusting sensor Adjustable with optional remote control																	
Minimum sensor range:	35mm / 1.38"																	
Maximum sensor range:	300mm / 11.81"																	
Security time:	90 seconds. Can be reduced with optional remote control																	
Hot water temperature:	Max. 70°C																	


Note:

* All information of the above is for the reference only. No prior notice is made if any changes.



SPARE PARTS LIST

TUBULAR XLE (350415)

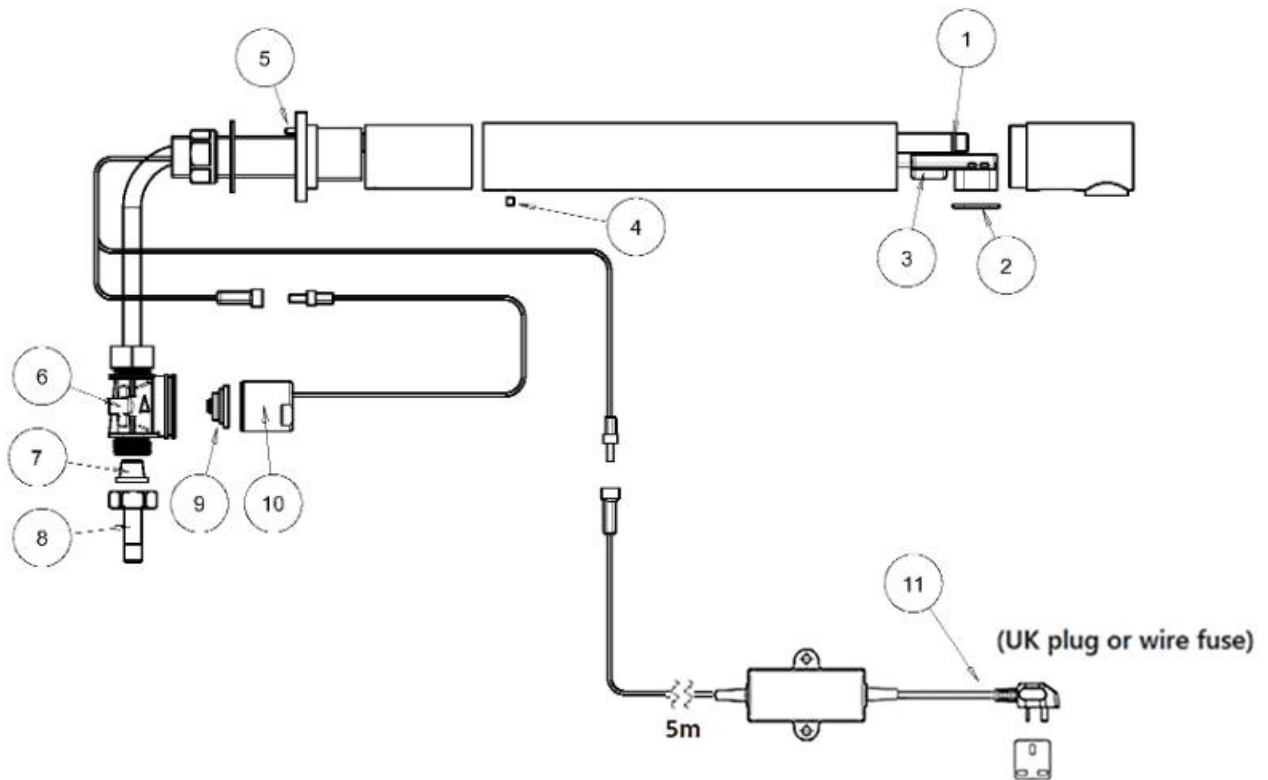

Quantity	Part Number	Description	Cat. No.
	-	Seals and Screws Kit	07210112
1	1	O-ring	
1	2	O-ring	
1	4	Screw	
1	5	Screw	
	-	Self Adaptive Sensor Kit	07220060
1	3	Self Adaptive Sensor	
1	2	O-ring	
	-	Solenoid BS-Housing Kit	07231008
1	6	Solenoid valve's body	
1	7	Filter	
1	8	Nipple	
	-	Solenoid Valve Kit	07230017
1	10	Solenoid valve	
1	9	Diaphragm	
	9	Diaphragm	04500001
	11	Transformer	TBC

Note: In order to locate the relevant spare part, please check the corresponding parts and part number in the drawing. Minimum order quantity will be required.

** All information of the above is for the reference only. No prior notice is made if any changes.*



INSTALLATION/INSTALACIÓN

TUBULAR B / E

STEP 1 – INSTALLING THE FAUCET/ PASO 1 - INSTALAR EL GRIFO

<p>1</p>	<p>(EN) Shut off the water supply.</p> <p>(ES) Cierre el suministro de agua.</p>	
<p>2</p>	<p>(EN) Drill a hole (26 to 27 mm) where you want to install the spout of the faucet, and a small hole just above the previous one for the anti-rotation pin.</p> <p>(ES) Corte un orificio (26-27 mm) en el lugar donde quiere instalar el caño del grifo, y un orificio pequeño justo encima del anterior para la clavija antirrotación</p>	
<p>3</p>	<p>(EN) Remove the gasket, the disk, the nut and the flexible pipe from the base of the faucet and insert the faucet through the wall.</p> <p>Note: To remove flexible pipe rotate counter clockwise.</p> <p>(ES) Retire la junta, el disco, la tuerca y el tubo flexible de la base del grifo e inserte el grifo a través de la pared.</p> <p>Nota: Para retirar el tubo flexible, gire en dirección contraria a las agujas del reloj.</p>	
<p>4</p>	<p>(EN) Secure the rosette into position using the anti rotation pin.</p> <p>(ES) Fije la roseta en su posición por medio de la clavija antirrotación.</p>	
<p>5</p>	<p>(EN) Fix the base behind the wall with the hexagonal nut and the disk.</p> <p>Reinstall the flexible pipe into the base. Rotate the pipe clockwise.</p> <p>(ES) Fije la base por detrás de la pared con la tuerca hexagonal y el disco.</p> <p>Coloque de nuevo el tubo flexible en la base. Gírelo en el sentido de las agujas el reloj.</p>	



INSTALLATION/INSTALACIÓN


TUBULAR B / E

STEP 2 - CONNECTING THE WATER SUPPLY/ PASO 2 - CONEXIÓN DEL SUMINISTRO DE AGUA

1

(EN) Fit the flexible pipe coming from the product base to the solenoid valve housing. Fit the water supply inlet to the adapter at the solenoid valve housing.
Inlet and outlet should follow the indicating arrow on the solenoid housing.

(ES) Conecte el tubo flexible que sale de la base del producto a la carcasa de la válvula solenoide. Conecte la entrada del suministro de agua al adaptador de la carcasa de la válvula solenoide.
La entrada y la salida deben seguir la flecha indicativa que se encuentra en la carcasa de la solenoide.

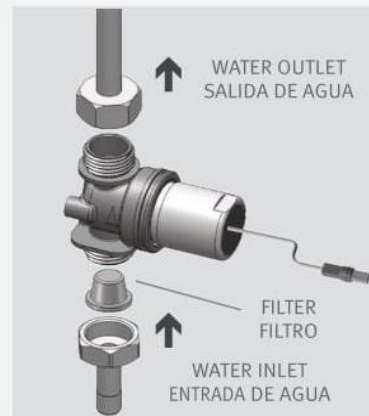

(EN) Note: Make sure the filter is located between the solenoid housing and the water inlet.

(ES) NOTA: Asegúrese de que el filtro está colocado entre la carcasa de la solenoide y la entrada de agua.

2


(EN) Connect the cable coming from the electronic unit to the solenoid valve.

(ES) Conecte el cable procedente de la unidad electrónica a la válvula solenoide.




(EN) Important: This product includes a self adjusting sensor. The ideal sensor range for the specific location will be set automatically.

(ES) IMPORTANTE: Este producto incorpora un sensor autoadaptativo. El rango del sensor idóneo e ajustará automáticamente

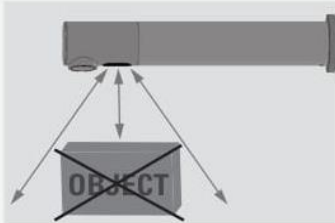

(EN) Before proceeding, check that no objects are in front of the sensor besides the washbasin.

(ES) Antes de proceder, compruebe que no haya ningún objeto delante del sensor, aparte del lavabo.

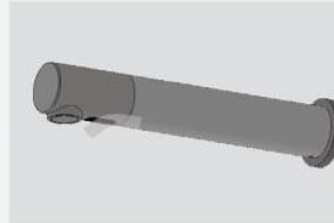

(EN) Now, remove the protective sticker that covers the sensor.

(ES) Ahora retire la pegatina protectora que cubre el sensor.



INSTALLATION/INSTALACIÓN

TUBULAR B / E

STEP 3 – CONNECTING THE POWER SOURCE/ PASO 3 - CONEXIÓN DE LA FUENTE DE ALIMENTACIÓN

1a


(EN) For Tubular B: Connect the other cable coming from the electronic unit at the product base to the battery box.

(ES) Para Tubular B: Conecte el otro cable proveniente de la unidad electrónica, en la base del producto, a la caja portapilas.

1b

(EN) For Tubular E: Connect the other cable coming from the electronic unit at the product base to the transformer. Plug the transformer into the electricity socket.

(ES) Para Tubular E: Conecte el otro cable proveniente de la unidad electrónica, en la base del producto, al transformador. Enchufe el transformador a la red eléctrica.

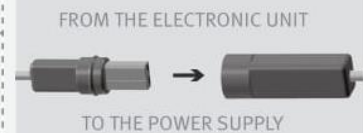

2

(EN) After you have connected the power source (battery or transformer) wait 15 seconds in order to allow the system to set the ideal sensor range. As an indication that the self adjusting is taking place, a LED in the sensor eye will flash continuously.

The solenoid valve will be opened and closed for 1 second as an indication that the ideal sensor range is set and the product is ready for use.

(ES) Una vez conectada la fuente de alimentación (pila o transformador), espere 15 segundos para permitir al sistema establecer el rango idóneo del sensor. El indicativo de que se está realizando el autoajuste es el parpadeo continuo de la luz del sensor.

La válvula solenoide se abrirá y cerrará durante un segundo como indicativo de que el rango idóneo se ha establecido y que el producto se encuentra listo para su uso



ABOUT/ APROX.
15
SECONDS/ SEGUNDOS

3

(EN) Turn on the central water supply. Check for leaks.

(ES) Abra el suministro general de agua. Compruebe que no haya fugas.



(EN) NOTE: This product includes a special aerator that allows you to adjust the water stream direction on site in order to prevent water splashing if needed. To change the angle of the water stream, simply move the adjustable tilting plate by pressing it smoothly.

ATTENTION! the aerator is tightened to prevent removal by hand.

(ES) NOTA: Este producto incluye un aireador especial que permite al usuario ajustar in situ la dirección del chorro de agua en caso necesario, para evitar salpicaduras. Para modificar el ángulo del chorro de agua, simplemente mueva la lámina basculante ajustable con una ligera presión.

¡ATENCIÓN! El aireador está fuertemente apretado para evitar que se pueda extraer manualmente.



(EN) If the automatically adjusted sensor range is not satisfactory to your purposes, please refer to the section entitled "Settings adjustment".

(ES) Si el rango del sensor establecido automáticamente no es el adecuado para usted, consulte el apartado "Modificación de parámetros".

**(EN) TROUBLESHOOTING**

PROBLEM	INDICATOR	CAUSE	SOLUTION
No water coming out of the faucet:	1.Sensor flashes continuously when user's hands are within the sensor's range.	Low battery.	Replace battery
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Range is too short.	Increase the range
		2. Range is too long.	Decrease the range
3. LED in the sensor flashes once when user's hands are within the sensor's range.		3. Battery is completely used up	The battery must be replaced.
		4. Unit is in "Security Mode"*	
		5. Sensor is picking up reflections from the washbasin or another object.	Eliminate cause of reflection.
		1. Debris or scale in solenoid.	Unscrew solenoid, pull out the plunger and the spring from the solenoid and clean them. Use scale remover material if needed. When replacing the plunger, please make sure that the spring is in vertical position.
			2. The central orifice in the diaphragm is plugged or the diaphragm is torn
3. The water supply pressure is higher than 8 bar.	Reduce the supply water pressure.		
4. The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the backcheck prevents from dropping, even after water supply pressure drops under 8 bars.	Shut off water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product.		
Water flow from spout does not stop:	1. Sensor flashes once when user's hands are within the sensor's range.	1. Debris or scale in diaphragm	Clean the orifice or replace diaphragm.
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	2. Connectors between the electronic unit and the Dual power input box are disconnected or not connected properly	Connect the connectors properly. Refer to pages 8/13/17 to see how.
		1. Sensor is dirty or covered.**	Clean or eliminate cause of interference.
	2. Sensor is picking up reflections from the washbasin or another object.	Decrease the range or eliminate cause of reflection.	
Water flow diminished		Filter or aerator is clogged	Remove, clean, re-install

* "Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. To return to normal operation remove any blockage.

** In this case, the water flow will stop anyway after 90 seconds because of the security time.