


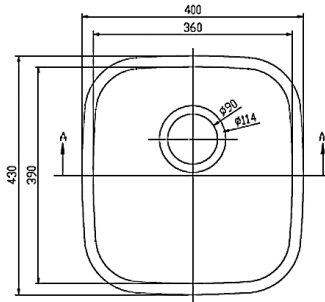
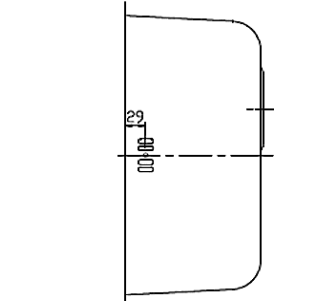
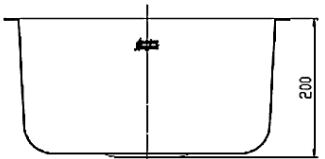
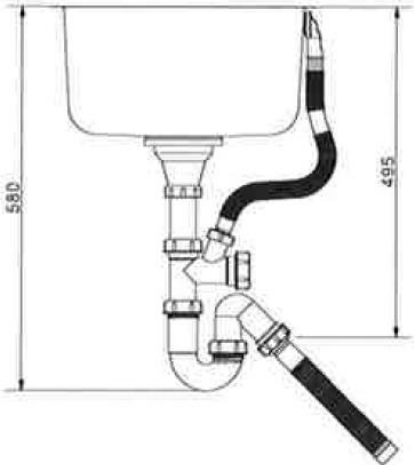


## Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong  
Tel: 2388 7171 Fax: 2710 8012  
E-mail: [acme@acmesanitary.com.hk](mailto:acme@acmesanitary.com.hk)  
Website: [www.acmesanitaryware.com.hk](http://www.acmesanitaryware.com.hk)

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

### SANITARY WARE SPECIFICATION SHEET

Item Descriptions	American Standard (PRC) Small single stainless steel undercounter kitchen sink	Illustration/ Drawing
Dimensions	L430 x W400 x H200 mm (Overall) L390 x W360 x H200 mm (Bowl)	
Model	CF-X111.202.B5	
Finish	Stainless Steel 304	
Manufacturer	American Standard (PRC)	
Source	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen	
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012	
E-mail	<a href="mailto:acme@acmesanitary.com.hk">acme@acmesanitary.com.hk</a>	
Website	<a href="http://www.acmesanitary.com.hk">www.acmesanitary.com.hk</a>	  
<p>Drain Pipe Assemble Height</p> 		

Note:


\* All information of the above is for the reference only. No prior notice is made if any changes.

## INSTALLATION


### INSTALL THE SINK




**NOTE:** You may require different, more specialized tools to install this sink to countertop materials other than wood or wood composites.

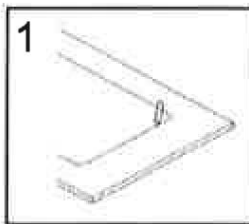


1. Clean the countertop,  
Track the cutout template outline onto the countertop.  
Make sure the sink will not interfere with the cabinet.

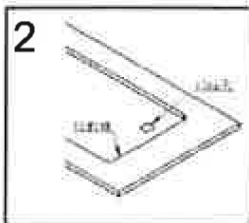


2. Drill a pilot hole inside the cutting line.  
Using a jig or keyhole saw, cut along the outline to cut out the opening in the countertop.

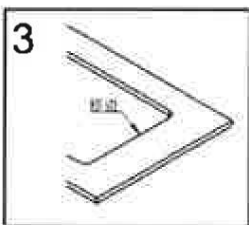


3. By trimming machine, files and sandpaper polish the cut edge,  
for a desired fillet.

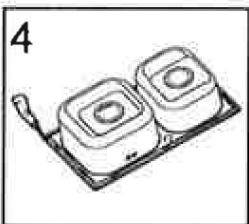

4. Paste sealing tape along the back rim of the sink.  
Apply a bead of quality sealant to maximize sealing effect.

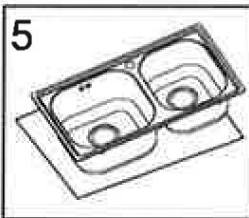

5. Position the sink onto the cut-out area.

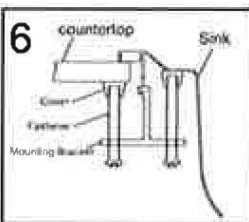

6. Attach mounting clips.

**Note:** 1. Evenly tighten the mounting clip screws;  
2. Wipe away any excess sealant from the countertop with a dry cloth;  
3. Verify that there are no gaps;  
4. Allow the sealant to cure for at least 30 minutes before proceeding.

## DRAIN INSTALLATION

### Single Bowl Drain

