



Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong

Tel: 2388 7171 Fax: 2710 8012


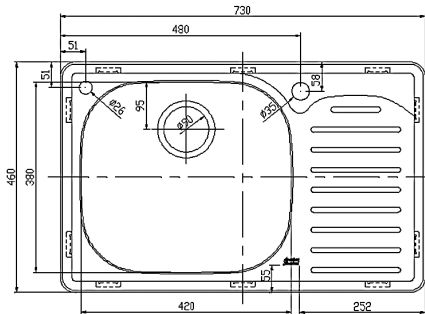
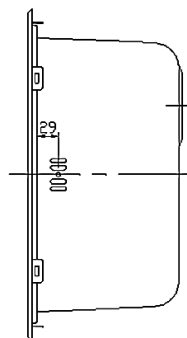
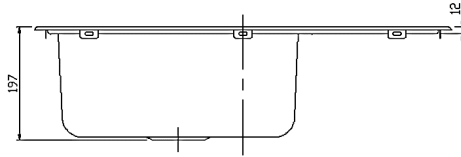
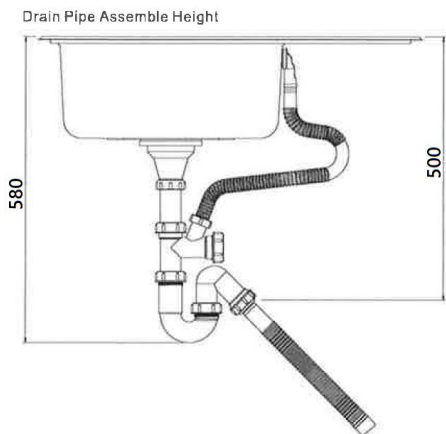
E-mail: acme@acmesanitary.com.hk

Website: www.acmesanitaryware.com.hk

American Standard

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SANITARY WARE SPECIFICATION SHEET

Item Descriptions	American Standard (PRC) Stainless steel single bowl upper-counter kitchen sink with waster & overflow	Illustration/ Drawing
Dimensions	L730 x W460 x H197 mm (Overall) L380 x W420 x H197 mm (Bowl)	
Model	CF-X170.1D2.B5	
Finish	Stainless Steel 304	
Manufacturer	American Standard (PRC)	
Source	Acme Sanitary Ware Co. Ltd Mr. Eric Wong / Mr. Don Yuen	
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012	
E-mail	acme@acmesanitary.com.hk	
Website	www.acmesanitary.com.hk	
Detail specifications		
Single bowl Upper-Counter kitchen sink		
With Waster & Overflow		
Capacity(to overflow): 23.2L		
		

Note:

* All information of the above is for the reference only. No prior notice is made if any changes.



Acme Sanitary Ware Co Ltd


Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong

Tel: 2388 7171 Fax: 2710 8012


E-mail: acme@acmesanitary.com.hk

Website: www. acmesanitaryware.com.hk

American Standard

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SANITARY WARE SPECIFICATION SHEET

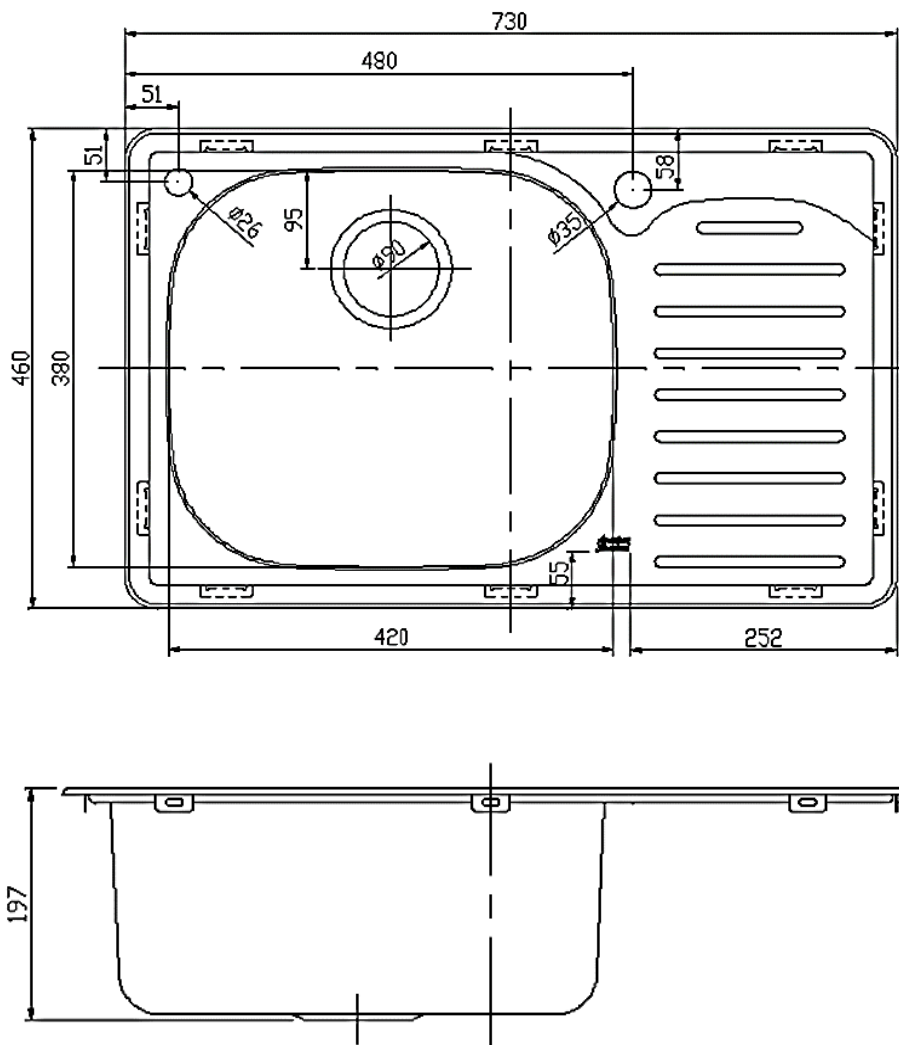


Note:

* All information of the above is for the reference only. No prior notice is made if any changes.


INSTALLATION

INSTALL THE SINK


NOTE: You may require different, more specialized tools to install this sink to countertop materials other than wood or wood composites.

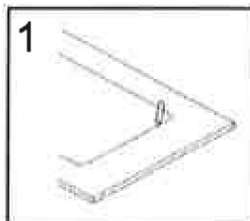


1. Clean the countertop,
Track the cutout template outline onto the countertop.
Make sure the sink will not interfere with the cabinet.

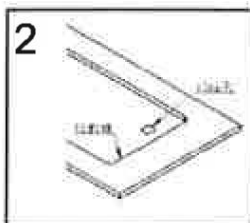


2. Drill a pilot hole inside the cutting line.
Using a jig or keyhole saw, cut along the outline to cut out the opening in the countertop.

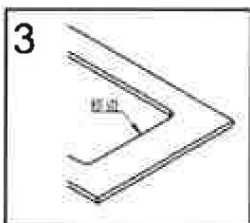


3. By trimming machine, files and sandpaper polish the cut edge,
for a desired fillet.

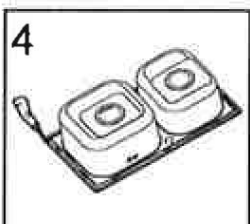

4. Paste sealing tape along the back rim of the sink.
Apply a bead of quality sealant to maximize sealing effect.

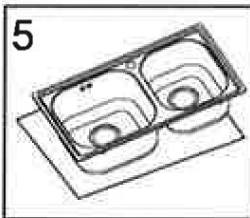

5. Position the sink onto the cut-out area.

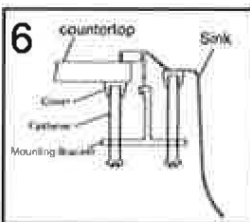

6. Attach mounting clips.

Note: 1. Evenly tighten the mounting clip screws;
2. Wipe away any excess sealant from the countertop with a dry cloth;
3. Verify that there are no gaps;
4. Allow the sealant to cure for at least 30 minutes before proceeding.

DRAIN INSTALLATION

Single Bowl Drain

