

1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk



PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		Page	

SANITARY WARE SPECIFICATION SHEET

Stern (Israel) "Swan SD" Chrome plated Item Descriptions liquid soap dispenser with built-in sensor in DC Supply with 6D battery box Dimensions Height = 118 mmModel Swan Soap Dispenser B Code Number 250920 Finish Chrome Plated Supplier Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012 E-mail acme@acmesanitary.com.hk

SWAN SOAP DISPENSER E

Ref # 250920

Website

Touch free electronic soap dispenser for deck mounted installations. Activated by infrared sensor. Chrome plated body, other finishes available. Includes a 1 liter soap bottle and bottle support. Optional for remote installation: extension cable and longer piping. The following functions can be performed by using Stern remote control: soap quantity selection, refill the soap tank, temporary off, coming back to factory settings.

www.acmesanitary.com.hk


Application:

Closing automatically without dripping, Stern's touch free soap dispenser helps to ensure that the bathroom will stay organized and neat. Combined with Swan touch free electronic faucet, it creates a germ-free and automated environment.

Use:

Touch free electronic soap dispenser. The soap dispenser is activated automatically when the users bring their hands within the sensor range and stops when the users remove their hands.

		PRO	DUCT AT A GLANCE					
Installation	1	Deck-mounted						
Power Supply		9V battery 12V transformer						
Soap		1 Liter soap bottle. Peristaltic pump enables the use of any kind of liquid soap, detergent or antibacterial gel						
Soap Dose		Default setting: 1.2-1.6 cc Adjustable by remote control in accordance to the selected soap.						
Refill	1	Soap priming operated by remote control or by easy-to-use manual refill button						
		ORDE	RING INFORMATION					
MODEL		CODE	POWER					
SWAN SOAP DISPENSER B		250920	9V BATTERY					
SWAN SOAP DISPENSER E		250910	12V TRANSFORMER					

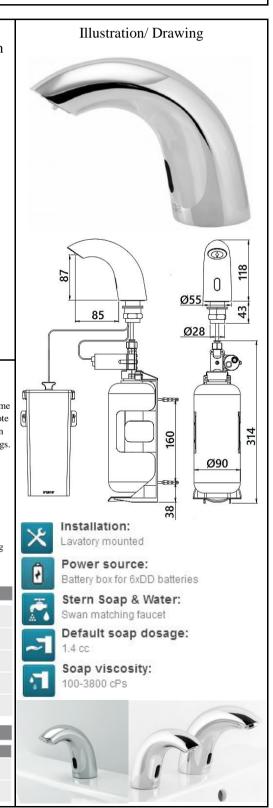

^{*} All information of the above is for the reference only. No prior notice is made if any changes.




1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Website: www.acmesanitary.com.hk



PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	_

SPARE PARTS LIST

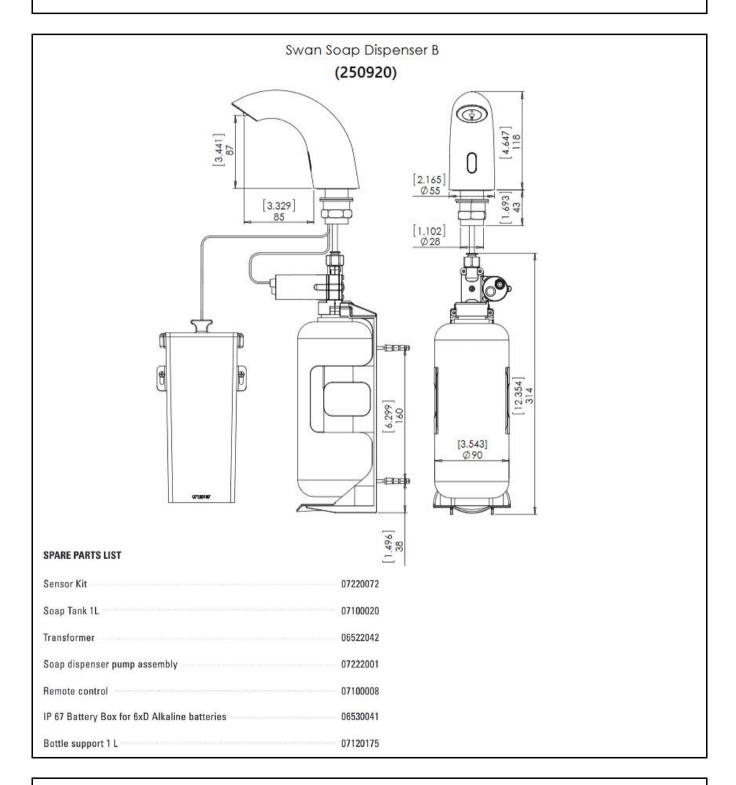

Note: In order to locate the relevant spare part, please check the corresponding parts and part mumber in the drawing. Minimum order quantity will be required.

^{*} All information of the above is for the reference only. No prior notice is made if any changes.



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk



INSTALLATION

Step 1 - Remove all mounting hardware

Remove the nut, disk and gasket from the base of the soap dispenser body.



Step 2 - Installing the soap dispenser

1. Place the soap dispenser body into the hole in the deck or lavatory.



2. Slide the disk, gasket and nut over the soap dispenser body nipple and secure it.






1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk




INSTALLATION


3. If you would like to install the soap dispenser without using the supplied bottle support, disassemble the pump from the body support by unscrewing the two adjoining screws and proceed to step 5.

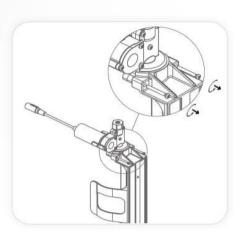

4. Fix the bottle support to the desired location.

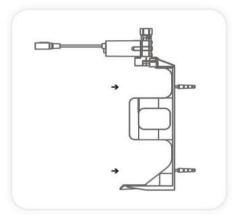

5. Assemble the tube from the pump to the soap dispenser.

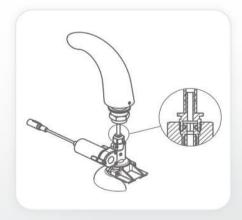



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk



INSTALLATION

6. Screw in the nut at the top of the soap dispenser pump assembly to the soap dispenser body nipple.



Step 3 - Connecting the power source

1. Remove the protective sticker covering the sensor. Keep away from the sensor range.



a. Connect the motor connector to the power source connector. Please note that since the connector is water proof, some friction might apply.

Important: the 4 contacts connector should be connected properly so that the semi white o-ring is not visible and a clicking sound is heard.

Pay attention: If the 4 contacts connectors will not be connected properly, the motor will work continuously.



O-ring visible — not connected properly






1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk




INSTALLATION

- b. For battery versions: install the battery box at the wall underneath the sink and connect the battery connector
- c. For transformer versions: plug the transformer into the electricity socket and connect the transformer connector

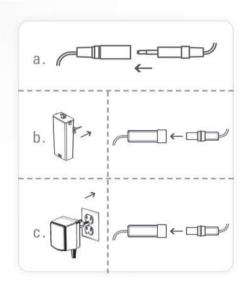

3. Wait about 10 seconds before you put your hands within the sensor range.

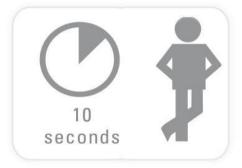



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitarv.com.hk Since 1949 Website: www.acmesanitary.com.hk



TROUBLE SHOOTING

