

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

### SANITARY WARE SPECIFICATION SHEET

Item Descriptions

Stern (Israel) "Multifeed Kits" Top filling kit for multiple soap dispensing with LED soap level

indication

Model Top Filling Multifeed Kit With Soap Level

Indication

Code Number 07220152

Finish Chrome Plated

Supplier Acme Sanitary Ware Co. Ltd

Mr. Eric Wong/ Mr. Don Yuen

Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012

E-mail acme@acmesanitary.com.hk
Website www.acmesanitary.com.hk

#### TOP FILLING MULTIFEED KIT WITH LEVEL INDICATION Touch Free Soap Dispensers Ref # 07220152

Top filling kit for multiple soap dispensing with soap level indication. Supports up to six soap dispensers and can be combined with Stern's deck mounted or wall mounted soap dispensers. Includes a 6 liter soap tank, tank support and top filling mechanism with anti-theft cover. Lockable top button in high quality chrome plated finish. Supplied with power splitter to be connected to the MF soap dispenser transformer.

#### Application:

Stern's Top filling multifeed soap dispenser kit with level indication is simple, clean and quick to install. The LED incorporated in the top filling cap indicates the following levels of soap:

Green: soap in tank
Orange: low soap level
Red: empty tank


#### Use:

To fill in the soap tank, simply open the top filling cover using the special key provided and pour soap in. No need to remove the container from below the counter.



### Illustration/ Drawing



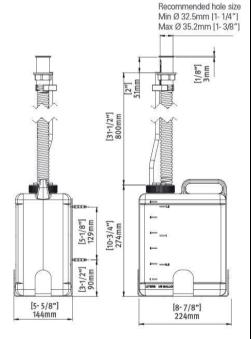




w&feature=youtu.be

<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.





# **SPARE PARTS LIST**

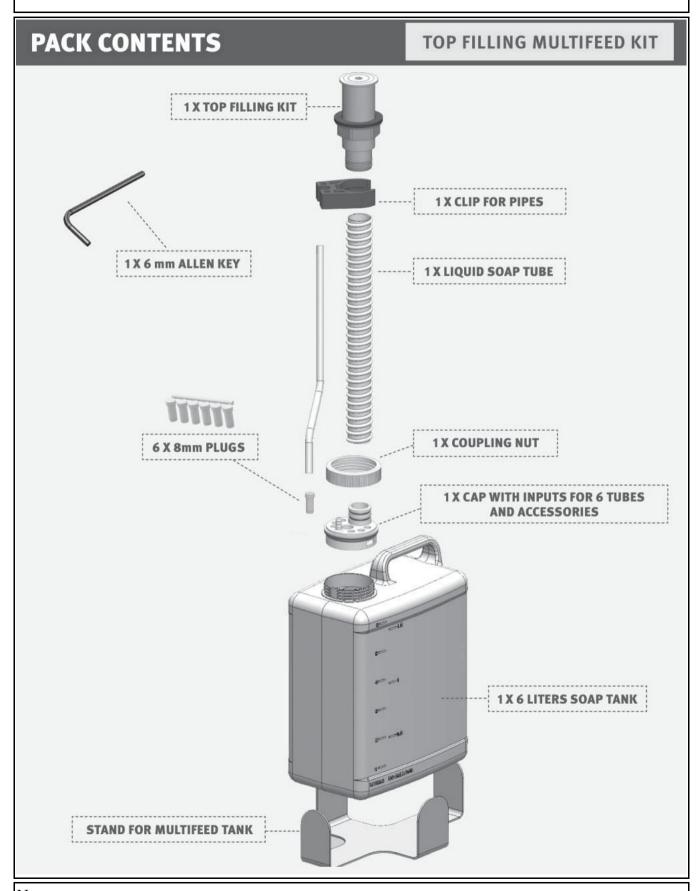

Note: In order to locate the relevant spare part, please check the corresponding parts and part mumber in the drawing. Minimum order quantity will be required.

<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.

# **MULTIFEED KITS**

#### Muliple soap dispensers installtion kit

#### Features:


- · Allows multiple soap dispensers installation (up to six (6) dispensers) with a single 1.6 US gallon (6L) tank
- · Stainless Steel tank support

#### Options:

- · Anti-theft top filling mechanism for easy refill from the
- · Top filling mechanism with anti-theft protection
- · LED light indicator of soap level
- · Under-the-deck filling mechanism

#### Advantages:

- · Drastically reduces soap consumption
- · Cross contamination protection no physical contact
- · Maximized savings can be used with any nonproprietary soap
- · Easy installation
- · Fast and simple refill with optional LED indication of soap level
- · Highly durable with optional vandal-resistant top-filling mechanism

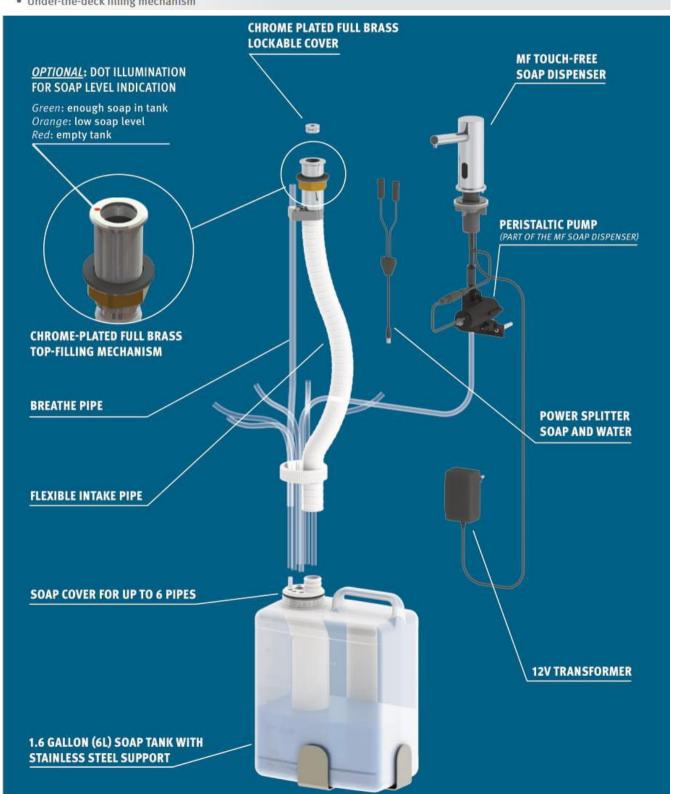

# **Acme Sanitary Ware Co Ltd**



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk




# **INSTALLATION**

TOP MULTIFEED KIT


Drill a hole in the deck or lavatory according to the top filling kit recommended hole size.

Remove the flat seal, disk and nut from the base of the top filling kit.

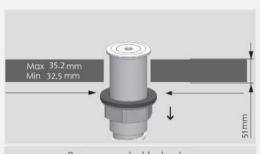


Recommended hole size

Place the top filling kit into the hole in the deck or lavatory and secure it in place using the flat seal, disk and nut.

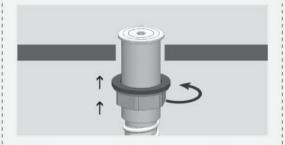

If you are using the soap tank support fix it to the desired location.

**NOTE:** Keep in mind the maximum distance between the Multifeed dispenser pump and the Multifeed Kit should not exceed 3 meters.

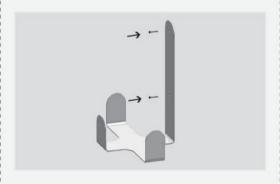

Place the soap tank under the deck or into the tank support.





### **Acme Sanitary Ware Co Ltd**





Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk




# **INSTALLATION**

TOP MULTIFEED KIT






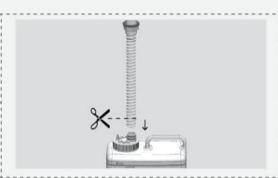

 $\binom{7}{7}$ 

Connect the breathe pipe to the breathe nozzle in the cap. Ensure both the breathe pipe and the corrugated tube are connected to the top filling unit by means of the clip.

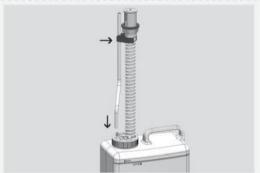

8


Cut the soap pipe coming from the Multifeed soap dispenser to the right length as required by the installation.

In order for the pipe to reach the bottom of the tank, make sure that the end of the pipe is approximately 2 cm longer than the tank inner base.





Insert the Multifeed soap dispensers' pipes into the holes of the soap tank cap. Ensure the soap pipes reach the bottom of the soap tank and are not bent or curved.

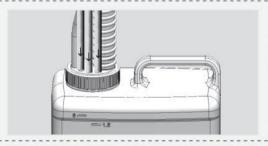



NOTE: The Top filling Multifeed Kit enables installing up to 6 soap dispensers simultaneously. When installing less than 6 soap dispensers, make sure to plug the remaining holes with the provided 8mm plugs.



# **Acme Sanitary Ware Co Ltd**



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



# **FILLING THE SOAP TANK**

TOP MULTIFEED KIT


#### STEP 1 - FILLING THE SOAP TANK

Fill the soap tank with liquid soap until it is full. Open the top filling cap using the 6mm Allen key provided in the package.

Keep the key for future use (soap tank re-filling).




Refer to the 'Technical Data' section of this manual for soap viscosity specifications.

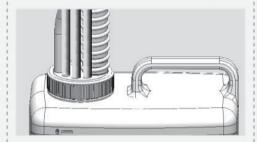

### STEP 2 - PRIMING THE SOAP

Press and hold the refill button located at the back of the pump assembly until soap is dispensed from the soap dispenser spout.

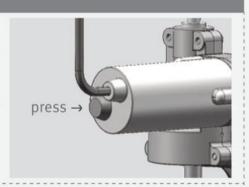

Alternately, press the FILL button on the soap or foam dispenser remote control (if available).

