



PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SANITARY WARE SPECIFICATION SHEET

<p>Item Descriptions</p> <p>American Standard (Thailand) "Tonic New Wave" Plastic slow closing seat and cover</p>	<p>Dimensions</p> <p>L479 x W375 x H57 mm</p>	<p align="center">Illustration/ Drawing</p>
Model	474000S	
Material	Plastic	
Manufacturer	American Standard (Thailand)	
Source	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen	
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012	
E-mail	acme@acmesanitary.com.hk	
Website	www.acmesanitary.com.hk	
<p align="center">PC-474300S Hinge set</p>		


Note: Equivalent to CL6095M-6D / 474000S-WT

* All information of the above is for the reference only. No prior notice is made if any changes.

Installation manual for toilet seat and cover

American Standard

- Tonic Close Coupled
- Moments one piece

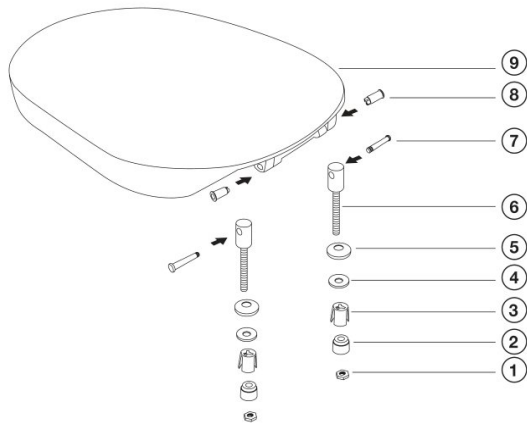


Note :

Read this installation manual clearly in order to make product installation correctly.


1	Brass nut spacer	6	Hinge body
2	Expansion nut	7	Hinge pin
3	Plastic Expansion Part	8	Plastic spacer
4	Rubber washer	9	Seat & Cover
5	Stainless steel spacer		

1

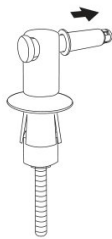


Remove the plastic socket from Hinge Body.

5

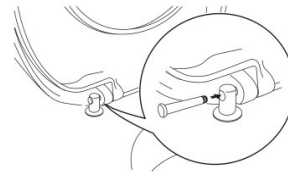


Assemble the seat & cover into Hinge body by insert Hinge pin through to both side of Hinge body set (see the picture). Re-check all over again, to see whether the seat & cover are fit properly into the toilet seat.

2

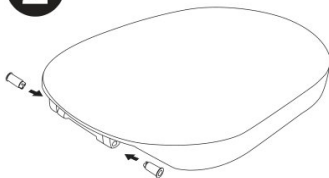


Install the seat & cover by putting on a plastic spacer (8) into the seat & cover (9) (see the picture)

6

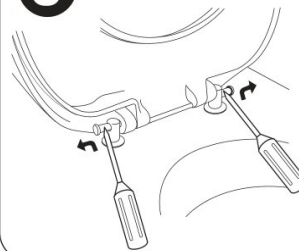


In case of improper installation, remove the hinge pin in both side and reverse the procedure by following back to step 5 again.

3

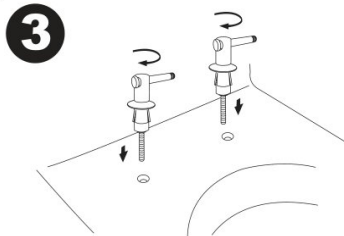

Install Hinge body with the toilet and tighten the connection securely following the clockwise direction.

4

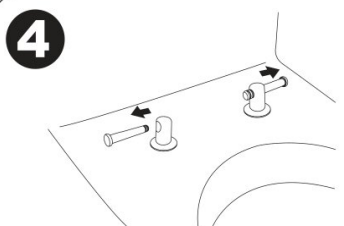

Remove the hinge pin (7) out of the Hinge body.

CARE AND CLEANING

When cleaning your Toilet Seat wash it with mild, soapy water rinse the Seat thoroughly with clear water and dry with soft cloth, avoid detergents, disinfectants, or cleaning products in aerosol cans. Never use abrasive scouring powders on your Seat: some bathroom chemicals and cosmetic may damage the Seat's finish.