

1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk

American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

SANITARY WARE SPECIFICATION SHEET

American Standard (PRC) "Pristine" E-Bidet Item Descriptions front and rear cleaning hested seat Dimensions L535 x W472 x H173 mm Model CEAS7SL1-0100510M0 Material Plastic Manufacturer American Standard (PRC) Source Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012 E-mail acme@acmesanitary.com.hk Website www.acmesanitary.com.hk

Pristine E-Bidet

Front and rear cleansing

Heated seat

Single stainless nozzle with

self-cleaning


Anti-bacterial resin

Warm air dryer (selected models)

Auto deodorization (selected models)

One-touch auto cleansing, oscillation

& massage (selected models)

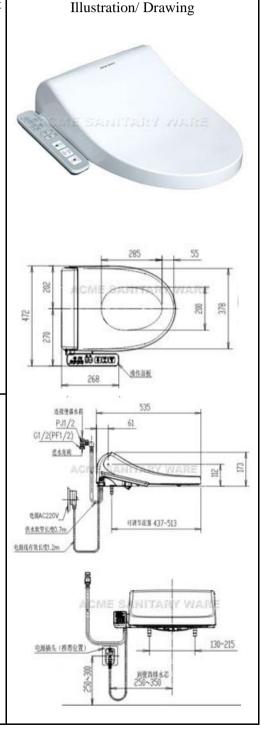

Note: Equivalent to CEAS7SL1-0100510M0 / CEAS7SL1-0100510C0



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012

Email: acme@acmesanitary.com.hk Website: www.acmesanitary.com.hk

American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

Product Code		05407014
Product Code		CEAS7SL1
Dimensions (W x	L x H)	472 x 535 x 173mm (Long)
	*	472 x 511 x 173mm (Short)
Hygienic Cleansi Nozzle	ng	Dual Nozzles
	nhi Cuntam	Hot Water Storage
Warm Water Sup Posterior Cleansi		not water storage
rostenor Cleansi Feminine Cleansi		•
	ble Soft Cleansing	•
Oscillating	DIE SOIT CIEARSING	•
Massage		
-	oing	
One-Touch Cleansing Water Pressure Adjustment		3 - 5 Levels
	,	5 Levels
Nozzle Position Adjustment Comfort		5 Levels
Dryer (Adjustable	Temperature)	3 Levels
Auto Deodorizer	romportation	•
	ustable Temperature)	3 Levels (with Auto-Off)
Seat Sensor	double temperature)	• e
	Seat (SIAA Standard)	
	Cover	
Anti-Bacterial Protection	Nozzle	
Protection	Remote/ Panel	
	(Surface Only)	•
Soft Closing Seat & Cover		
Easy To Clean		
Type of Nozzle		PPE Nozzle
Self-Cleaning No	zzle	•
Nozzle Shutter		•
Quick-Detach Se	at Cover	•
Power Saving		

SIDE PANEL FUNCTIONS

ADJUSTABLE SPRAY STRENGTH

Factory default is set at 3 levels

but user can set it up to 6 levels.

B ADJUSTABLE NOZZLE POSITION

With 5 levels

ASY TO CLEAN

NOZZLE SHUTTER

A nozzle shutter prevents waste materials from getting to the nozzle tips, thus ensuring better hygiene.


QUICK-DETACH SEAT COVER The design of the seat cover allows it

to be easily detached for convenient

will stop, while cleansing and flushing will still operate. Machine will resume

to original settings after 8 hours.

cleaning of hard-to-reach areas.



HEATED SEAT



Temperature can be easily adjusted for comfort. Setting is computer-memorized and is kept at same setting as previous user.



DEODORIZER

COMFORT TECHNOLOGY

The deodorizer is activated as soon as the user is seated.



DRYFR

Temperature can be easily adjusted for comfort. Computer-memorized settings allows one to keep the same settings as the previous user's.





ANTI-BACTERIAL PROTECTION

Anti-bacterial additive is applied to the seat, cover, nozzles and control panel to effectively inhibit bacteria breeding. Certified to SIAA ISO 22196 standard for anti-bacterial efficacy (seat only).



SLOW CLOSING SEAT & COVER Gentle and quiet closing action.

HYGIENIC CLEANSING



DUAL NOZZLES

Equipped with dedicated front and rear cleansing nozzles.



POSTERIOR CLEANSING

Offers a strong, direct spray for a thorough cleanse.



FEMININE AIR BUBBLE SOFT CLEANSING

A gentle flow of warm aerated water provides a soothing shower that's gentle enough for a woman's

delicate areas.



MASSAGE

The spray alternates between strong and mild sprays, creating a massaging effect that indulges



a

ONE-TOUCH CLEANSING

Suitable for both elderly and children, one-touch cleansing activates the posterior/feminine oleansing & dryer functions consecutively at a touch of a button.

American Standard

Raising The Standard

Note:			

ONE-TOUCH POWER SAVER

| 暗標 |

后

0

ADJUSTABLE SEAT AND With 3 levels.

Seat and water heating functions will

stop, while cleansing and flushing will still

WATER TEMPERATURE With 3 levels

^{*} All information of the above is for the reference only. No prior notice is made if any changes.



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk

American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	





ote

^{*} All information of the above is for the reference only. No prior notice is made if any changes.



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk

American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

LASTING CLEANING

臀部清洗 持久煦流

脉冲水流技术,满足长时间清洗需求,舒适臀洗, 清洁卫生,呵护家人娇嫩肌肤,更方便自由。



I WOMEN CLEANING

女性清洗

妇洗的轻柔泡沫清洗模式,空气与水流比例融合,细腻 柔和雾状水流,温柔呵护女性肌肤,私处护理更贴心。



MASSAGE CLEANING

移动清洗

臀部清洗-移动清洗 按下臀部清洗按键,清洗水流从喷嘴前 端喷出,清洗臀部。再次按下,将进入前后移动清洗状态, 扩大清洗范围。

妇洗-移动清洗 按下妇洗按键,清洗水流从喷嘴前端喷出,清 洗女性的敏感部位。再次按下,将进入前后移动清洗状态, 扩大清洗范围。



MASSAGE CLEANING

在臀部清洗中按下"按摩"按键,开启臀部按摩清洗功能, 喷嘴水势大小可以调节,给您带来犹如按摩的清洗体验。 *妇洗不具备按摩清洗功能。



WARM WATER

按住"水温"和喷嘴位置"后"按键并保持2秒以上即可将 温水温度切换为5档调节,智能人性化五档水温调节,冲洗 水温更稳定, 供应更持久。



N	ote
---	-----



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk


American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	



安装前请先确认座便器及周围尺寸

满足D、E、H尺寸 ,即可安装于80%以上的座便器。

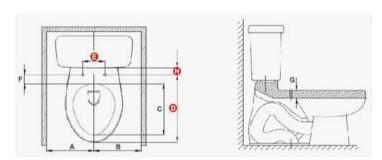

序号	检查项目名称	明韵系列电子盖板(长版)	明韵系列电子盖板(短版)
1	安装孔到陶瓷顶端距离D	500mm≥D≥437mm	475mm≥D≥412mm
2	安装孔中心距 <mark>E</mark>	215mm≥E≥130mm	215mm≥E≥130mm
3	座便器周围宽度A'B	A≥270mm B≥195mm	A≥270mm B≥195mm
4	座便器内径长度C	396mm≥C≥334mm	377mm≥C≥314mm
5	安装孔到座便器内径距离F	F<110mm	F<110mm
6	安装孔深度G	G≥50mm (盲孔) 通孔不限	G≥50mm (盲孔)通孔不限
7	水箱到安装孔距离H	H≥25mm	H≥25mm

N	ote
---	-----

^{*} All information of the above is for the reference only. No prior notice is made if any changes.