



Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong
 Tel: 2388 7171 Fax: 2710 8012
 E-mail: acme@acmesanitary.com.hk
 Website: www.acmesanitaryware.com.hk



PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			LEGEND	

SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Stern (Israel) "Ever SD AISI316" Stainless steel AISI316 liquid soap dispenser with built-in sensor in AC Supply with 5m wire AC 110-240 Vac 50/60Hz to 12V 2.5A IP68 waterproof switching transformer	Illustration/ Drawing																														
Dimensions	L83 x W33 x H104 mm																															
Model	Ever Soap Dispenser Mains AISI316																															
Code Number	230920																															
Finish	Stainless Steel AISI316																															
Supplier	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen																															
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012																															
E-mail	acme@acmesanitary.com.hk																															
Website	www.acmesanitary.com.hk																															
EVER SOAP DISPENSER MAINS Ref # 230920 Touch free electronic soap dispenser for deck mounted installations. Activated by infrared sensor. For use with any non-proprietary soap. Stainless Steel AISI316 body, other finishes available. Includes a 1 liter soap bottle and bottle support. With a designated peristaltic pump that prevent clogginf and back flow. Asjustable settings by remote control: soap quantity selection, refill the soap tank, temporary off, reset to factory settings.																																
Application: With the dripless automatic shutoff, this soap dispenser helps washroom organization and cleanliness. Combined with the touch-free electronic and clealiness. Combined with the touch-free electronic faucet, it creates a germ-free automated environment. Ideal for stadiums, train and bus stations and highway reset stops.																																
Use: Touch free electronic soap dispenser. The soap dispenser is activated automatically when the users bring their hands within the sensor range and stops when the users remove their hands.																																
<table><tr><th colspan="2">PRODUCT AT A GLANCE</th></tr><tr><td>Installation</td><td>Deck-mounted</td></tr><tr><td>Power Supply</td><td>• Battery box for 6 x DD Batteries • 12V transformer</td></tr><tr><td>Soap</td><td>1 Liter soap bottle Peristaltic pump enables the use of any kind of liquid soap, detergent or antibacterial gel</td></tr><tr><td>Soap Dose</td><td>Default setting: 1.2-1.6 cc. Adjustable by remote control</td></tr><tr><td>Soap Viscosity</td><td>100-3800 cPs</td></tr><tr><td>Refill</td><td>Soap priming operated by remote control or by easy-to-use manual refill button</td></tr></table>			PRODUCT AT A GLANCE		Installation	Deck-mounted	Power Supply	• Battery box for 6 x DD Batteries • 12V transformer	Soap	1 Liter soap bottle Peristaltic pump enables the use of any kind of liquid soap, detergent or antibacterial gel	Soap Dose	Default setting: 1.2-1.6 cc. Adjustable by remote control	Soap Viscosity	100-3800 cPs	Refill	Soap priming operated by remote control or by easy-to-use manual refill button																
PRODUCT AT A GLANCE																																
Installation	Deck-mounted																															
Power Supply	• Battery box for 6 x DD Batteries • 12V transformer																															
Soap	1 Liter soap bottle Peristaltic pump enables the use of any kind of liquid soap, detergent or antibacterial gel																															
Soap Dose	Default setting: 1.2-1.6 cc. Adjustable by remote control																															
Soap Viscosity	100-3800 cPs																															
Refill	Soap priming operated by remote control or by easy-to-use manual refill button																															
<table><tr><th colspan="3">ORDERING INFORMATION</th></tr><tr><th>MODEL</th><th>CODE</th><th>POWER</th></tr><tr><td>EVER SD BATTERY</td><td>230910</td><td>Battery box for 6 x DD Batteries</td></tr><tr><td>EVER SD MAINS</td><td>230900</td><td>12V transformer</td></tr><tr><td>EVER SD BATTERY 6-PACK</td><td>230901</td><td>Battery box for 6 x DD Batteries</td></tr><tr><td>EVER SD MAINS 6-PACK</td><td>230901</td><td>12V transformer</td></tr><tr><td>EVER SD BATTERY AISI316</td><td>230930</td><td>Battery box for 6 x DD Batteries</td></tr><tr><td>EVER SD MAINS AISI316</td><td>230920</td><td>12V transformer</td></tr><tr><td>EVER SD BATTERY AISI316 6-PACK</td><td>230931</td><td>Battery box for 6 x DD Batteries</td></tr><tr><td>EVER SD MAINS AISI316 6-PACK</td><td>230921</td><td>12V transformer</td></tr></table>		ORDERING INFORMATION			MODEL	CODE	POWER	EVER SD BATTERY	230910	Battery box for 6 x DD Batteries	EVER SD MAINS	230900	12V transformer	EVER SD BATTERY 6-PACK	230901	Battery box for 6 x DD Batteries	EVER SD MAINS 6-PACK	230901	12V transformer	EVER SD BATTERY AISI316	230930	Battery box for 6 x DD Batteries	EVER SD MAINS AISI316	230920	12V transformer	EVER SD BATTERY AISI316 6-PACK	230931	Battery box for 6 x DD Batteries	EVER SD MAINS AISI316 6-PACK	230921	12V transformer	<div><div>Installation: Lavatory mounted</div><div>Power source: 12 V transformer</div><div>Default soap dosage: 1.4 cc</div><div>Soap viscosity: 100-3800 cPs</div></div> <div></div>
ORDERING INFORMATION																																
MODEL	CODE	POWER																														
EVER SD BATTERY	230910	Battery box for 6 x DD Batteries																														
EVER SD MAINS	230900	12V transformer																														
EVER SD BATTERY 6-PACK	230901	Battery box for 6 x DD Batteries																														
EVER SD MAINS 6-PACK	230901	12V transformer																														
EVER SD BATTERY AISI316	230930	Battery box for 6 x DD Batteries																														
EVER SD MAINS AISI316	230920	12V transformer																														
EVER SD BATTERY AISI316 6-PACK	230931	Battery box for 6 x DD Batteries																														
EVER SD MAINS AISI316 6-PACK	230921	12V transformer																														

* All information of the above is for the reference only. No prior notice is made if any changes.




Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong
Tel: 2388 7171 Fax: 2710 8012
E-mail: acme@acmesanitary.com.hk
Website: www.acmesanitaryware.com.hk

stern

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SPARE PARTS LIST

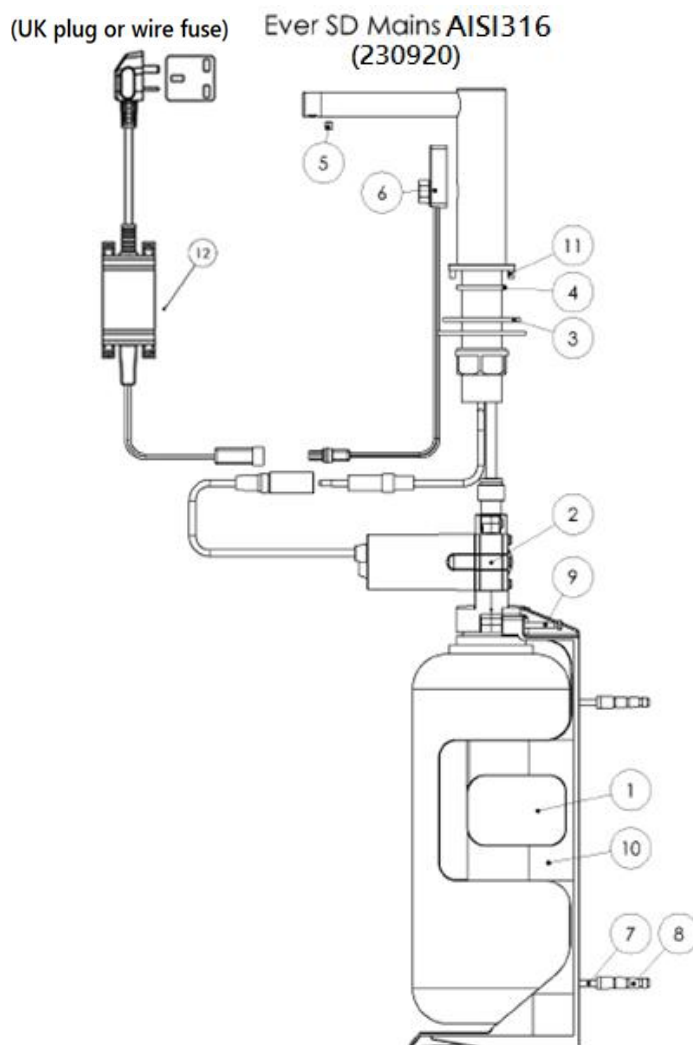

Quantity	Part Number	Description	Cat. No.
	-	Seals and Screws Kit	07210180
1	4	O-ring	
1	5	Screw	
2	11	Screw	
1	3	Gasket	
2	7	Screw	
2	8	Anchor	
2	9	Screw	
	6	Sensor	08004030
	1	Soap Tank 1L	07100020
	2	Pump Soap Dispenser	07222028
	10	Bottle 1L support	07120177
	12	Transformer	TBC

Note: In order to locate the relevant spare part, please check the corresponding parts and part number in the drawing. Minimum order quantity will be required.

* All information of the above is for the reference only. No prior notice is made if any changes.




INSTALLATION

STEP 1 – REMOVE ALL MOUNTING HARDWARE


For TRENDY, ELITE, EXTREME, SMART, GREEN, GREEN 28 Soap Dispensers:

Drill a hole in the deck or lavatory according to the recommended hole size.


Remove the nut, the disk and the gasket from the base of the soap dispenser body.

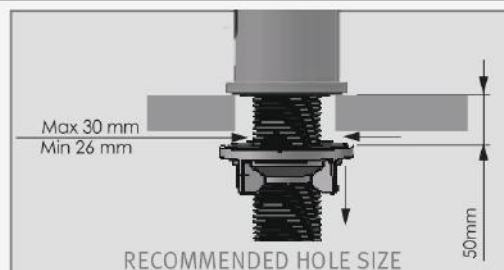

If your dispenser is supplied with anti-rotation solution, drill an additional hole for anti-rotation pin.

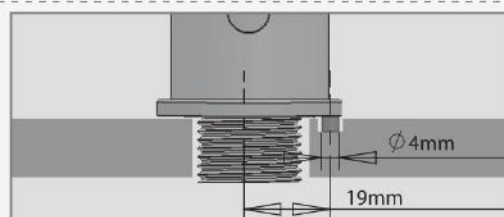**For CSABA Soap Dispenser:**

Remove the hexagonal nut, disk and washer. Do not remove the O-ring from the base of the faucet.

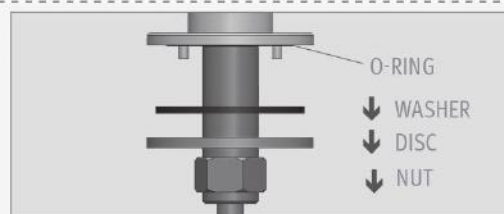

Drill a hole in the counter for the mixing handle. Remove the nut, disk and seal.



STEP 2 – INSTALLING THE SOAP DISPENSER


1

For TRENDY, ELITE, EXTREME, SMART, GREEN, GREEN 28 Soap Dispensers: Place the soap dispenser body along with the bottom ring into the hole in the deck or lavatory.

Slide the gasket, disk and nut over the soap dispenser body nipple and secure it.

**For CSABA Soap Dispenser:**

Slide the washer, disk and hexagonal nut over the flexible hose and secure the faucet into place.

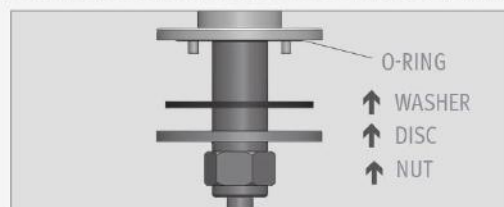




INSTALLATION

2

Fix the bottle with bottle support to the desired location.

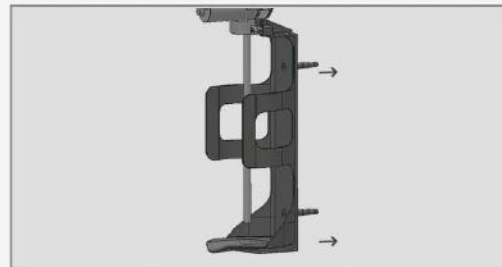

3


Snap the soap pipe from the dispenser body into the quick connection fitting of the pump.



STEP 3 – CONNECTING THE POWER SOURCE

1

Remove the protective sticker covering the sensor. Keep away from the sensor range.

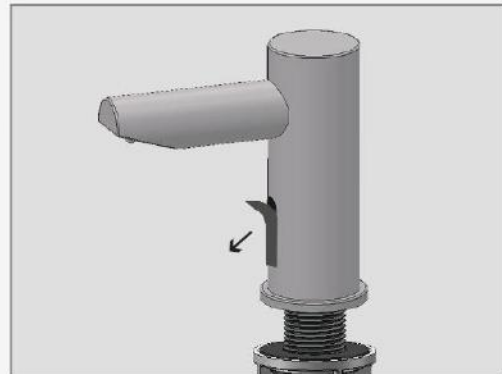

2

Connect the motor connector to its matching connector coming from the electronic unit. Please note that since the connector is water proof, some friction might apply.



O-RING VISIBLE –
NOT CONNECTED PROPERLY



ONLY THE GROOVES ARE VISIBLE –
CONNECTED PROPERLY



INSTALLATION

IMPORTANT: the 4 contacts connector should be connected properly so that the white o-ring is not visible and a clicking sound is heard.

PAY ATTENTION: If the 4 contacts connectors is not connected properly, the motor will work continuously.

2a


For battery versions: install the battery box on the wall underneath the sink and connect the battery connector.

Caution: make sure to connect the connectors according to the indication on the battery box sticker.



2b

For transformer versions: plug the transformer into the electricity socket and connect the transformer connector

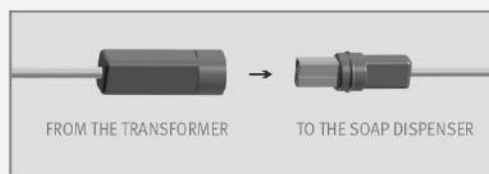

3

Wait about 10 seconds before you put your hands within the sensor range.





TROUBLESHOOTING

Indication	Investigation	Cause	Solution	Illustration
False activation: Soap dispensing	Continuous discharge from the nozzle	AUX connector not fully inserted	The connector should be inserted fully until white o-ring is not visible. Remove the o-ring if necessary	
	Random discharge from the nozzle	Reflection issue from other object	Eliminate any cause of reflection and if necessary use appropriate remote control to shorten detection range.	
	Soap discharging from pump housing.	Damaged pump due to high viscosity or debris in pipes	Replace the Pump. Rinse warm water through the pipe and the body of the soap dispenser all the way to the nozzle.	
Soap not dispensing	Pump is making sounds when sensor is activated	Soap tank is empty	Fill with soap with correct viscosity (100 - 3800 cPs) and prime pipes using the fill button on remote control.	
		Soap dispenser has not been primed	Prime the soap dispenser by pressing the fill button on the remote or by pressing the refill button located at the bottom of the pump, until soap exits the nozzle.	
		Damaged pump (discharge from housing)	Replace the Pump	
		Debris or dried soap in the pipe or tank	Run warm water through pipe, pump, and body all the way to the nozzle. Replace with soap of correct viscosity.	
		High viscosity soap (> 3800 cPs)	NOTE: Using the soap dispenser with high viscosity soap may cause permanent damage to the pump and shorten the lifecycle.	
		Bent pipes	Unbend or straighten pipes.	



TROUBLESHOOTING

Indication	Investigation		Cause	Solution	Illustration
Soap not dispensing	Pump is not making sound when the sensor is activated	Sensor is blinking when hand is placed in front	AUX connector not fully inserted	The connector should be inserted fully until the white o-ring is not visible. Remove the o-ring if necessary	<p>O-RING VISIBLE – NOT CONNECTED PROPERLY</p> <p>ONLY THE GROOVES ARE VISIBLE – CONNECTED PROPERLY</p>
			Refill button on pump does not activate the pump.	Replace the Pump. Rinse warm water through the pipe and the body of the soap dispenser all the way to the nozzle.	<p>Press</p>
			Damaged pump (discharge from housing).		
			Debris or dried soap in the tank or tubing	Run warm water through pipe, pump, and body all the way to the nozzle. Replace with soap of correct viscosity. NOTE: Using the soap dispenser with high viscosity soap may cause permanent damage to the pump and shorten the lifecycle.	
	Sensor is not blinking when hand is placed in front	Refill button on pump does not activate the pump.	Transformer: Check operation with functioning transformer. Where necessary replace with appropriate transformer. For part numbers see spare parts list.		<p>Refill button</p>
			Battery: Check operation with functioning battery pack. Where necessary, replace batteries or replace the battery pack: Battery pack (without batteries)		
		Reflection issue from other object	Eliminate any cause of reflection and use appropriate remote control to shorten detection range.		<p>Min 1.5 M</p>
		Damaged sensor	If the above two solutions have not resolved this issue replace with appropriate sensor. For part numbers see spare parts list.		<p>Replace sensor</p>