



PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SANITARY WARE SPECIFICATION SHEET

<p>Item Descriptions</p> <p>Dimensions</p> <p>Model</p> <p>Material/ Finish</p> <p>Manufacturer</p> <p>Supplier</p> <p>Contact Tel/Fax</p> <p>E-mail</p> <p>Website</p>	<p>Mediclinics (Spain) stainless steel AISI 304 wall-mounted push-button liquid soap dispenser in satin finish</p> <p>L100 x W128 x H275 mm</p> <p>DJ0040CS</p> <p>Stainless Steel / Satin Finish</p> <p>Mediclinics, S.A. (Spain)</p> <p>Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen</p> <p>(852) 2388-7171 / (852) 2710-8012</p> <p>acme@acmesanitary.com.hk</p> <p>www.acmesanitary.com.hk</p>	<p style="text-align: center;">Illustration/ Drawing</p> 												
<p>General Description</p> <ul style="list-style-type: none"> • Liquid soap dispenser, wall mounted made in stainless steel AISI 304. • Push-button operated. • Robust and vandal-resistant. • Suitable for high traffic facilities. • Model suitable for public use. • Allows disinfectant solutions, liquid soaps or hydro-alcoholic gel. Surgical soaps and soaps with solid abrasive particles are not supported. <p>Components & materials</p> <ul style="list-style-type: none"> • DJ0040: Stainless steel AISI 304, white epoxy finish. • DJ0040C: Stainless steel AISI 304, bright finish. • DJ0040CS: Stainless steel AISI 304, satin finish. • DJ0040B: Stainless steel AISI 304, black matte epoxy finish. • Push button made in thermoplastic with stainless steel cover 0,8mm thick. • Push button frame made in green plastic RAL 7022. • Content viewer on the front that allows see the soap level in each moment. • Corrosion-resistant anti-drip valve. • In inner tank made in plastic, 2,5mm thick. • Hinged cover for operator convenience and speed of service. • Opening on top with provided Mediclinics key that allows soap refill. • It is mounted on the wall by means of 3 stainless steel screws with their corresponding Ø 6mm well plugs (the upper ones attach the dispenser whilst the lower one fix it to the wall). Screws and plugs are provided. 														
		<p>Technical Specifications</p> <table border="1"> <tr> <td>Dimensions</td> <td>275x100x128 mm</td> </tr> <tr> <td>Capacity</td> <td>1.500 ml</td> </tr> <tr> <td>Body, cover & base plate thickness</td> <td>0.8 mm</td> </tr> <tr> <td>Inner Tank Thickness</td> <td>2.5 mm</td> </tr> <tr> <td>Net weight</td> <td>1.2 Kg</td> </tr> <tr> <td>Quantity dispensed per pump</td> <td>0.8 ml</td> </tr> </table>	Dimensions	275x100x128 mm	Capacity	1.500 ml	Body, cover & base plate thickness	0.8 mm	Inner Tank Thickness	2.5 mm	Net weight	1.2 Kg	Quantity dispensed per pump	0.8 ml
Dimensions	275x100x128 mm													
Capacity	1.500 ml													
Body, cover & base plate thickness	0.8 mm													
Inner Tank Thickness	2.5 mm													
Net weight	1.2 Kg													
Quantity dispensed per pump	0.8 ml													

Note:

* All information of the above is for the reference only. No prior notice is made if any changes.





Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong

Tel: 2388 7171 Fax: 2710 8012

E-mail: acme@acmesanitary.com.hk

Website: www.acmesanitaryware.com.hk

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	


SANITARY WARE SPECIFICATION SHEET

Operation

Place one hand just under the soap dispenser valve and press the center push-button until the end of the soap dosage.

Mounting Template

Fix the soap dispenser on the wall to 100-150 mm from shelf or bath counter top, using the provided screws through the back mounting plate holes (points indicated by an "S" in the figure below).

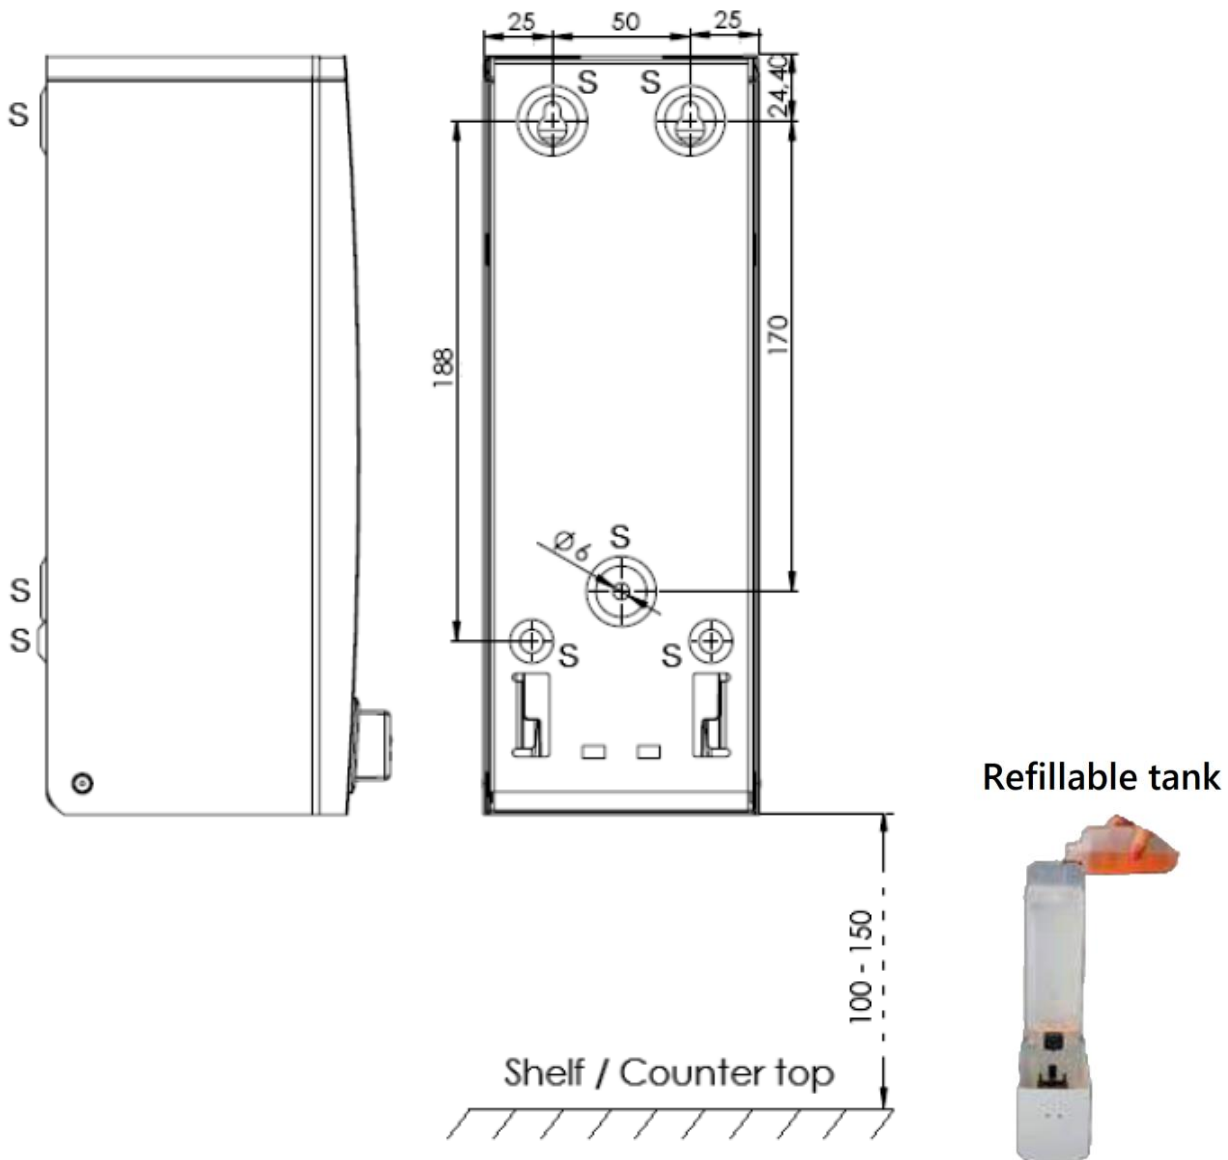

Note:



* All information of the above is for the reference only. No prior notice is made if any changes.

Source: Mediclinics.